



CMS Client Software for Mac

User Manual

Legal Information

User Manual

About this Manual

The Manual includes instructions for using and managing the product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version in the company website.

Please use this user manual under the guidance of professionals.

Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, IS PROVIDED “AS IS”, WITH ALL FAULTS AND ERRORS, AND OUR COMPANY MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF THIRD PARTY. IN NO EVENT WILL OUR COMPANY, ITS DIRECTORS, OFFICERS, EMPLOYEES, OR AGENTS BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA OR DOCUMENTATION, IN CONNECTION WITH THE USE OF THIS PRODUCT, EVEN IF OUR COMPANY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. OUR COMPANY SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, OUR COMPANY WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

SURVEILLANCE LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS THE APPLICABLE LAW. OUR COMPANY SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS.

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
 Danger	Indicates a hazardous situation which, if not avoided, will or could result in death or serious injury.
 Caution	Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
 Note	Provides additional information to emphasize or supplement important points of the main text.

Contents

Chapter 1 Introduction and Overview	1
1.1 Introduction	1
1.2 Running Environment	1
1.3 Summary of Changes	1
Chapter 2 User Registration and Login	3
2.1 Register a User	3
2.2 Login	4
Chapter 3 Device Management	5
3.1 Activate Devices	5
3.2 Add Device	6
3.2.1 Add Online Device	6
3.2.2 Add Device by IP Address or Domain Name	9
3.2.3 Add Devices by IP Segment	11
3.2.4 Add Device by Cloud P2P	12
3.2.5 Add Device by HiDDNS	12
3.2.6 Import Devices in a Batch	14
3.3 Edit Device's Network Information	15
3.4 Restore/Reset Device Password	16
3.4.1 Reset Device Password	16
3.4.2 Restore Device's Default Password	17
3.5 Check Device's Online Users	18
3.6 Check Device's QR Code	18
Chapter 4 Group Management	20
4.1 Add Group	20
4.2 Import Resources to Group	20
4.3 Edit Channel Parameters	21

4.4 Remove Channel from Group	22
4.5 Delete Group	23
Chapter 5 Live View	24
5.1 Start and Stop Live View	24
5.1.1 Start Live View for One Camera	24
5.1.2 Start Live View for Camera Group	25
5.1.3 Start Live View in Default View Mode	26
5.1.4 Add Custom View	27
5.1.5 Start Live View in Custom View Mode	27
5.1.6 Stop Live View	28
5.2 Auto-Switch in Live View	28
5.2.1 Auto-Switch Cameras in a Group	29
5.2.2 Auto-Switch All Cameras in Default View	29
5.2.3 Auto-Switch Custom Views	30
5.3 PTZ Control	30
5.3.1 Configure Preset	31
5.3.2 Configure Patrol	31
5.3.3 Configure Pattern	32
5.4 Customize Window Division	33
5.5 Manually Record and Capture	33
5.5.1 Manually Record Video	34
5.5.2 View Local Videos	34
5.5.3 Capture Pictures	35
5.5.4 View Captured Pictures	35
5.6 Instant Playback	36
5.7 Live View for Fisheye Camera	37
5.7.1 Perform Live View in Fisheye Mode	37
5.7.2 PTZ Control in Fisheye Mode	38

5.8 Perform Master-Slave Linkage	39
5.8.1 Configure Master-Slave Tracking Rule	40
5.8.2 Enable Master-Slave Tracking	43
5.9 More Functions	44
Chapter 6 Remote Storage Configuration	45
6.1 Store Picture and Video on DVR, NVR, or Network Camera	45
6.2 Store Picture and Video on Storage Device	47
6.2.1 Add Storage Server to Client	47
6.2.2 Format Storage Server's HDD	47
6.2.3 Configure Storage Settings	48
6.3 Configure Recording Schedule Template	49
6.4 Configure Capture Schedule Template	50
Chapter 7 Remote Playback	52
7.1 Switch Video Stream for Playback	52
7.2 Normal Playback	52
7.2.1 Search Video Files	55
7.2.2 Play Video Files	55
7.3 Alarm Input Playback	56
7.3.1 Search Video Files	56
7.3.2 Play Video Files	56
7.4 Event Playback	57
7.4.1 Search Video Files	57
7.4.2 Play Video Files	58
7.5 ATM Playback	58
7.5.1 Search Video Files	59
7.5.2 Play Video Files	59
7.6 POS Playback	60
7.6.1 Search Video Files	60

7.6.2 Play Video Files	61
7.7 VCA Playback	62
7.8 Synchronous Playback	63
7.9 Fisheye Playback	64
Chapter 8 Download Video Files	66
8.1 Download by File	66
8.2 Download by Date	66
8.3 Download by Tag	67
8.4 Download for Multiple Cameras	68
Chapter 9 Event and Alarm	69
9.1 Alarm Configuration	69
9.1.1 Configure Motion Detection Alarm	69
9.1.2 Configure Video Tampering Alarm	71
9.1.3 Configure Video Loss Alarm	73
9.1.4 Configure Audio Exception Alarm	74
9.1.5 Configure Face Detection Alarm	76
9.1.6 Configure Line Crossing Detection Alarm	78
9.1.7 Configure Alarm Input Alarm	80
9.1.8 Configure Device Exception Alarm	81
9.1.9 Configure Arming Schedule	82
9.1.10 Configure Custom Arming Schedule	83
9.2 View Alarm and Event Information	84
9.2.1 Enable Receiving Alarms from Devices	84
9.2.2 View Alarm Information	84
9.2.3 View Event Information	85
9.2.4 View Pop-up Alarm Information	86
Chapter 10 Map Management	87
10.1 Add Map	87

10.2 Manage Hot Spot	87
10.2.1 Add Camera as Hot Spot	88
10.2.2 Add Alarm Input as Hot Spot	88
10.2.3 Add Alarm Output as Hot Spot	89
10.2.4 Edit Hot Spot	89
10.2.5 Preview Hot Spot	90
10.3 Manage Hot Region	91
10.3.1 Add Hot Region	91
10.3.2 Edit Hot Region	92
10.3.3 Preview Hot Region	92
Chapter 11 Cloud P2P	94
11.1 Register a Cloud P2P Account	94
11.2 Log in to Cloud P2P Account	95
11.3 Device Management	95
11.3.1 Add Device toCloud P2P Account	95
11.3.2 Edit Camera Parameters	97
Chapter 12 Log Management	99
12.1 Search Logs	99
12.1.1 Log Search	99
12.1.2 Search Connected Device Logs	99
12.2 Filter Logs	100
12.3 Export Pictures	100
Chapter 13 Account Management	102
Chapter 14 System Configuration	104
14.1 Set General Parameters	104
14.2 Set Live View and Playback Parameters	105
14.3 Set Image Parameters	106
14.4 Set File Saving Path	107

14.5 Set Icons Shown on Toolbar	107
14.6 Set Alarm Sound	108
14.7 Set Email Parameters	109
Appendix A. Troubleshooting	110
A.1 Failed to get the live view of a certain device.	110
A.2 Local recording and remote recording are confused.	110
A.3 Failed to download the video files or the downloading speed is too slow.	110
Appendix B. FAQ (Frequently Asked Questions)	112
B.1 During live view, why an error message with error code 91 prompts ?	112
B.2 During live view, why the image is blurred or not fluent?	112
B.3 Why the memory leaked and the client crashed after running for a while?	112
B.4 During live view, when getting stream via the Stream Media Server, why an error message with error code 17 prompts?	113
Appendix C. Error Code	114

Chapter 1 Introduction and Overview

Guarding Vision Client Software is a versatile security management software for the DVRs, NVRs, IP cameras, encoders, etc.

1.1 Introduction

The software provides multiple functionalities, including real-time live view, video recording, remote search and playback, file backup, alarm receiving, etc., for the connected devices to meet the needs of monitoring task. With the flexible distributed structure and easy-to-use operations, the client software is widely applied to the surveillance projects of medium or small scale.

This user manual describes the functions, configurations and operation steps of the client software. To ensure the properness of usage and stability of the software, refer to the contents below and read the manual carefully before installation and operation.

1.2 Running Environment

The followings are the recommended running environment for installing the client software.

Operating System

macOS version 10.12 to 10.14 (64-bit)

CPU

Intel Dual-Core 3.0 GHz or Above

Memory

4 GB or Above

Video Card

AMD RADEON HD 6470 M or Above

GPU

256 MB or Above



Note

For high stability and good performance, the above system requirements must be met.

1.3 Summary of Changes

The followings are the changes between this version and the previous version.

- Supports macOS version 10.12,10.13 and 10.14 (64-bit).
- Supports live view, playback, PTZ for cloud P2P device.
- Supports access of thermal devices and supports fire source detection and temperature measurement.
- Supports ATM playback, VCA playback, POS playback, etc.

Chapter 2 User Registration and Login

You should register a super user and then you can login the client with the super user account as administrator.

2.1 Register a User

For the first time using the client software, you should to register a super user for login.

Perform the following steps to register a super user for login.

Steps

1. After installing the client, double click  to run the software.

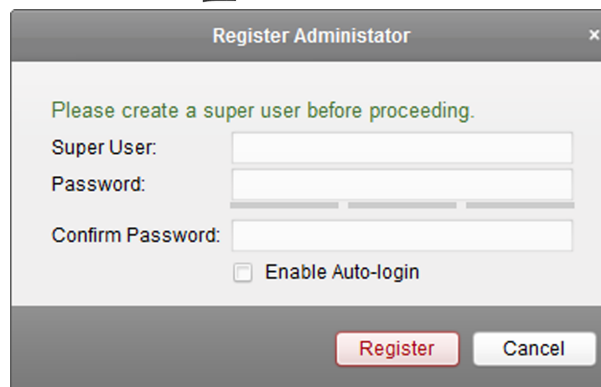


Figure 2-1 Register a User

2. Create a user name and password for the super user.

Note

- A user name cannot contain any of the following characters: / \ : * ? " < > | . And the length of the password cannot be less than 6 characters.
 - The software will judge password strength automatically. For your privacy, we strongly recommend changing the password to something of your own choosing (using a minimum of 8 characters, including upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product.
 - Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.
-

3. Confirm the password.
4. **Optional:** Check the **Enable Auto-login** checkbox to log into the software automatically.
5. Click **Register** to register the super user.

You can log into the software as super user.

What to do next

Log into the client. Refer to **Login** for details.

2.2 Login

You can log in to the client software to perform the operations, such as live view, playback, and so on.

Perform this task if you want to log in to the client software.

Steps

1. Run the client software to open Login dialog.

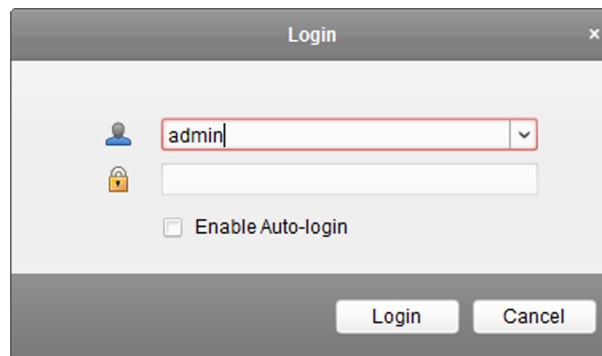


Figure 2-2 Login

2. Input the user name and password you registered.
3. **Optional:** Check **Enable Auto-login** checkbox to log in to the software automatically for next running.
4. Click **Login** to log in to the client software.

Chapter 3 Device Management

You can manage devices on the client, including adding, editing, and deleting the devices. You can also perform operations such as checking device's online users and checking devices' QR codes.

3.1 Activate Devices

For some devices, you are required to create the password to activate them before they can be added to the software and work properly.


Perform this task to activate device.

Steps

Note

This function should be supported by the device.

1. Enter the Device Management page.
2. Check the device status (shown on **Security** column) and select an inactive device on the **Device for Management** or **Online Device** area.

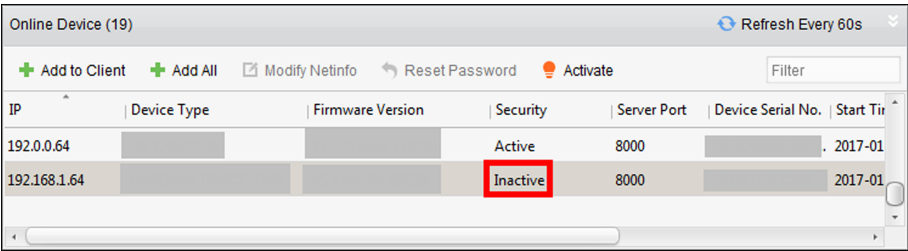

IP	Device Type	Firmware Version	Security	Server Port	Device Serial No.	Start Time
192.0.0.64			Active	8000		2017-01
192.168.1.64			Inactive	8000		2017-01

Figure 3-1 Online Device

3. Click **Activate** to open the Activation dialog.
4. Create a password in the password field, and confirm the password.

Caution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

5. **Optional:** For NVR device connected with inactive network camera(s), create a password in **IPC default password** field for activating the network camera(s) via NVR.

6. Optional: Enable Cloud P2P service when activating the device if the device supports.

- 1) Check **Enable Cloud P2P** to open the Note dialog.
- 2) Create a verification code.
- 3) Confirm the verification code.
- 4) Click **Terms of Service** and **Privacy Policy** to read the requirements.
- 5) Click **OK** to enable the Cloud P2P service.

7. Click **OK** to activate the device.

A "The device is activated." window pops up when the password is set successfully.

3.2 Add Device

After running the client, devices including network cameras, video encoders, Storage Server, Cloud P2P device, should be added to the client for the remote configuration and management, such as live view, playback, alarm settings, etc.

3.2.1 Add Online Device

The active online devices in the same local subnet with the client software will be displayed on the **Online Device** area. You can click **Refresh Every 60s** to refresh the information of the online devices.


Add Single Online Device

You can add single online device to the client software.

Perform this task to add single online device to the client software.

Steps

1. Enter the Device Management module.
2. Click **Device** tab and select **Device** as the device type to display the **Online Device** area.

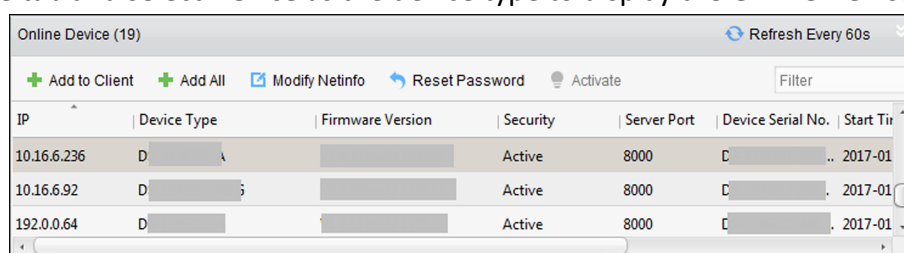

The screenshot shows a window titled "Online Device (19)" with a "Refresh Every 60s" button. Below the title bar are several action buttons: "Add to Client", "Add All", "Modify Netinfo", "Reset Password", and "Activate", along with a "Filter" input field. The main area contains a table with the following columns: IP, Device Type, Firmware Version, Security, Server Port, Device Serial No., and Start Time. Three rows of data are visible, all with "Active" security status and "8000" server port.

IP	Device Type	Firmware Version	Security	Server Port	Device Serial No.	Start Time
10.16.6.236	D		Active	8000	C	2017-01
10.16.6.92	D		Active	8000	C	2017-01
192.0.0.64	D		Active	8000	C	2017-01

Figure 3-2 Online Device

3. Select an online device from the **Online Device** area.



Note

For the inactive device, you need to create the password for it before you can add the device properly. For detailed steps, refer to **Activate Devices**.

4. Click **Add to Client** to open the device adding window.
5. Input the required information.

Address

Input the device's IP address. The IP address of the device is obtained automatically in this adding mode.

Port

The default value is 8000.

User Name

By default, the user name is admin.

Password

Input the device password.



Caution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

6. **Optional:** Check **Synchronize Device Time** to synchronize the device time with the PC running the client after adding the device to the client.
 7. **Optional:** Check **Export to Group** to create a group by the device name.
-



Note

You can import all the channels of the device to the corresponding group by default.

8. **Optional:** Add the offline devices.
 - 1) Check **Add Offline Device**.
 - 2) Input the required information, including the device channel number and alarm input number.
 - 3) Click **Add**.

When the offline device comes online, the software will connect it automatically.

9. Click **Add** to add the device.

Add Multiple Online Devices

You can add multiple online devices to the client software.

Perform this task if you need to add multiple online devices to the client software.

Steps

1. Enter the Device Management module.
2. Click **Device** tab and select **Device** as the device type to display the **Online Device** area.
3. Click and hold **Command** key to select multiple devices.



Note

For the inactive device, you need to create the password for it before you can add the device properly. For detailed steps, refer to **Activate Devices**.

4. Click **Add to Client** to open the device adding window.
5. Input the required information.

User Name

By default, the user name is admin.

Password

Input the device password.



Caution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

6. **Optional:** Check **Synchronize Device Time** to synchronize the time of the devices with the PC running the client after adding the devices to the client.
7. **Optional:** Check **Export to Group** to create a group by the device name.



Note

You can import all the channels of the device to the corresponding group by default.

8. Click **Add** to add the devices.

Add All Online Devices

You can add all online devices to the client software.

Perform this task if you need to add all online devices to the client software.

Steps

1. Enter the Device Management page.
2. Click **Device** tab and select **Device** as the device type to display the **Online Device** area.
3. Click **Add All** to open the device adding window.



Note

For the inactive device, you need to create the password for it before you can add the device properly. For detailed steps, refer to **Activate Devices**.

4. Input the user name and password.

User Name

By default, the user name is admin.

Password

Input the device password.



Caution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

5. **Optional:** Check **Synchronize Device Time** to synchronize the time of the devices with the PC running the client after adding the devices to the client.
6. **Optional:** Check **Export to Group** to create a group by the device name.



Note

You can import all the channels of the device to the corresponding group by default.

7. Click **Add** to add the devices.

3.2.2 Add Device by IP Address or Domain Name

You can add device by IP address or domain name.

Perform this task if you need to add device by IP address or domain name.

Steps

1. Open the Device Management module.
2. Click **Device** tab and select **Device** as the device type.
3. Click **Add** to open the Add window.
4. Select **IP/Domain** as the adding mode.
5. Input the required information, including nickname, IP address, port number, user name, and password.

Address

Input the device IP addresss or domain name.

Port

Input the device port No. The default value is 8000.

User Name

Input the device user name. By default, the user name is admin.

Password

Input the device password.



Caution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

6. **Optional:** Check **Synchronize Device Time** to synchronize the device time with the PC running the client after adding the device to the client.
 7. **Optional:** Check **Export to Group** to create a group by the device name.
-



Note

You can import all the channels of the device to the corresponding group by default.

8. **Optional:** Add the offline devices.
 - 1) Check **Add Offline Device**.
 - 2) Input the required information, including the device channel number and alarm input number.
 - 3) Click **Add**.

When the offline device comes online, the software will connect it automatically.

9. Click **Add** to add the device.

3.2.3 Add Devices by IP Segment

If you want to add devices of which the IP addresses are within an IP segment, you can specify the start IP address and end IP address, user name, password, and other parameters to add them.

Perform this task when you need to add devices to the client by IP segment.

Steps

1. Enter the Device Management module.
2. Click **Device** tab and select **Device** as the device type.
3. Click **Add** to open the Add window.
4. Select **IP Segment** as the adding mode.
5. Input the required information.

Start IP

Input a start IP address.

End IP

Input an end IP address in the same network segment with the start IP.

Port

Input the device port No. The default value is 8000.

User Name

By default, the user name is admin.

Password

Input the device password.



Caution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

-
6. **Optional:** Check **Synchronize Device Time** to synchronize the device time with the PC running the client after adding the device to the client.
 7. **Optional:** Check **Export to Group** to create a group by the device name.



Note

You can import all the channels of the device to the corresponding group by default.

-
8. **Optional:** Add offline devices to the client.

- 1) Check **Add Offline Device**.
- 2) Input the required information, including the device channel number and alarm input number.
- 3) Click **Add**.

When the offline device comes online, the software will connect it automatically.

9. Click **Add** to add the device.

3.2.4 Add Device by Cloud P2P

You can add the devices to the client via Cloud P2P domain.

Before You Start

Add the devices to Cloud P2P account first.

Perform this task when you need to add device by Cloud P2P domain.

Steps

1. Log in to the Cloud P2P account.
2. Open the Device Management module.
3. Click **Device** tab and select **Device** as the device type.
4. Click **Add** to open the Add window.
5. Select **Cloud P2P** as the adding mode.
The device(s) under the Cloud P2P account will be displayed.
6. Select the device(s).
7. Input the device user name and password.



Note

By default, the device user name is admin and the password is created when you activate the device.

8. **Optional:** Check **Synchronize Device Time** to synchronize the device time with the PC running the client after adding the device to the client.
 9. **Optional:** Check **Export to Group** to create a group by the device name.
-



Note

By default, you can import all the channels of the device to the corresponding group.

10. Click **Add** to add the device.

3.2.5 Add Device by HiDDNS

You can add device by HiDDNS.

Perform this task to add the device by HiDDNS.

Steps

1. Open the Device Management module.
2. Click **Device** tab and select **Device** as the device type.
3. Click **Add** to open the Add window.
4. Select **HiDDNS** as the adding mode.
5. Input the required information.

Server Address

<http://www.hiddns.com>

Device Domain Name

Input the device domain name registered on HiDDNS server.

User Name

Input the device user name.

Password

Input the device password.



Caution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

6. **Optional:** Check **Synchronize Device Time** to synchronize the device time with the PC running the client after adding the device to the client.
 7. **Optional:** Check **Export to Group** to create a group by the device name.
-



Note

You can import all the channels of the device to the corresponding group by default.

8. **Optional:** Add offline devices.
 - 1) Check **Add Offline Device**.
 - 2) Input the required information, including the device channel number and alarm input number.
 - 3) Click **Add**.

When the offline device comes online, the software will connect it automatically.

9. Click **Add** to add the device.

3.2.6 Import Devices in a Batch

The devices can be added to the software in batch by inputting the device information in the pre-defined CSV file.

Perform this task to import devices in a batch.

Steps

1. Enter the Device Management page.
2. Click **Device** → **Device** → **Add** to open the adding device window.
3. Select **Batch Import** as the adding mode.
4. Click **Export Template** and then save the pre-defined template (CSV file) on your PC.
5. Open the exported template file and input the required information of the devices to be added on the corresponding column.

Adding Mode

You can input **0**, **2**, **3**, **4**, **5**, or **6** which indicated different adding modes. **0** indicates that the device is added by IP address or domain name; **2** indicates that the device is added via IP server; **3** indicates that the device is added via HiDDNS; **4** indicates that the device is added via EHome protocol; **5** indicates that the device is added by serial port; **6** indicates that the device is added via Cloud P2P.

Address

Edit the address of the device. If you set **0** as the adding mode, you should input the IP address or domain name of the device; if you set **2** as the adding mode, you should input the IP address of the PC that installs the IP Server; if you set **3** as the adding mode, you should input **www.hiddns.com**.

Port

Input the device port No. The default value is 8000.

Device Information

If you set **0** as the adding mode, this field is not required; if you set **2** as the adding mode, input the device ID registered on the IP Server; if you set **3** as the adding mode, input the device domain name registered on HiDDNS server; if you set **4** as the adding mode, input the EHome account; if you set **6** as the adding mode, input the device serial No.

User Name

Input the device user name. By default, the user name is admin.

Password

Input the device password.



Caution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

Add Offline Device

You can input **1** to enable adding the offline device, and then the software will automatically connect it when the offline device comes online. **0** indicates disabling this function.

Export to Group

You can input **1** to create a group by the device name (nickname). All the channels of the device will be imported to the corresponding group by default. **0** indicates disabling this function.

Channel Number

If you set **1** for Add Offline Device, input the channel number of the device. If you set **0** for Add Offline Device, this field is not required.

Alarm Input Number

If you set **1** for Add Offline Device, input the alarm input number of the device. If you set **0** for Add Offline Device, this field is not required.

Cloud P2P Account

If you set **6** as the adding mode, input the Cloud P2P account.

Cloud P2P Password

If you set **6** as the adding mode, input the Cloud P2P account password.

6. Click  and select the template file.

7. Click **Add** to import the devices.

3.3 Edit Device's Network Information

After activating device, you can edit the network information for the online device.

Before You Start

Activate the device if the device status is inactivated.

Perform this task if you want to edit the network information of activated online device.

Steps

1. Enter Device Management page.
2. Select an activated device in **Online Device** area.
3. Click **Modify Netinfo** to open the Modify Network Parameter window.

Note

This function is only available on the **Online Device** area. You can change the device IP address to the same subnet with your computer if you need to add the device to the software.

4. Change the device IP address to the same subnet with your computer.
 - Edit the IP address manually.
 - Check **DHCP**.
5. Input the password created when you activate the device.
6. Click **OK** to complete the network settings.

3.4 Restore/Reset Device Password

If you forgot the password of the detected online devices, you can restore the device's default password or reset the device's password through the client .

3.4.1 Reset Device Password

If you forgot the password of the detected online devices, you can reset the device password through the client.

Perform this task if you want to reset the device password.

Steps

1. Enter the Device Management module.

All the online devices in the same subnet will display in the Online Device list.
2. Select the device from the list and click **Reset Password**.
3. Reset the device password.
 - If the window with Export button, password, and confirm password field pops up, click **Export** to save the device file on your PC and then send the file to our technical support.

Note

For the following operations for resetting the password, contact our technical support.

- If the window with **Export** and **Generate** buttons, password and confirm password field pops up, click **Generate** to pop up the QR Code window and click **Download** to save the QR code to your PC. You can also take a photo of the QR code to save it to your phone. Send the picture to our technical support.

Note

For the following operations for resetting the password, contact our technical support.

- If the window with safe mode selectable pops up, select the Safe Mode according to actual needs.

Note

For the following operations for resetting the password, contact our technical support.

Caution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

3.4.2 Restore Device's Default Password

For some old version device, if you forgot the password of the detected online devices, you can restore the device's default password through the client.

Perform this task if you want to restore the device password to the default one for the old version device.

Steps

1. Enter the Device Management module.

All the online devices in the same subnet will display in the Online Device list.

2. Select the device from the list and click **Reset Password**.

3. Restore the device password.

- If the window with security code field pops up, input the security code, and then you can restore the default password of the selected device.

Note

For getting the security code, contact our technical support.

- If the window with **Import** and **Export** buttons pops up, click **Export** to save the device file on your PC and send the file to our technical support.
-

Note

For the following operations for resetting the password, contact our technical support.

What to do next

The default password (12345) for the admin account is for first-time log-in purposes only. You must change this default password to better protect against security risks, such as the unauthorized access by others to the product that may prevent the product from functioning properly and/or lead to other undesirable consequences.



Caution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

3.5 Check Device's Online Users

When any user accesses the device, the client can record and show the connection information, including user name, user type, user's IP address, and login time.

Perform this task if you need to check the device's online users.

Steps



Note

This function should be supported by the device.

1. Enter the Device Management page.
2. Click **Device** → **Device** to display the device list
3. Select an added and online device.
4. Click **Online Users** to open the Online User window.
5. View the information of the users that log into the device.
6. Click **OK** to close the window.

3.6 Check Device's QR Code

The client can generate the QR code of the added devices. You can add the device to your mobile client software by using the mobile client software to scan the QR code. For adding the devices to your mobile client software, refer to the user manual of the mobile client software.

Perform this task to check device's QR code.

Steps

1. Open the Device Management page.
2. Click **Device** → **Device** to display the device list.
3. View a single device's QR code.
 - Double-click a device in the device list or select a device and click **Modify** to show the device information and QR code.
 - Select a device and click **QR Code** to open the QR code window.
4. **Optional:** Hold **Command** key and select multiple devices, and click **QR Code** to pop up the QR code window of multiple devices.

What to do next

Add the device to your mobile client software by using the mobile client software to scan the QR code. For adding the devices to your mobile client software, refer to user manual of the mobile client software.

Chapter 4 Group Management

The resources added should be organized into groups for convenient management, such as encoding channels, alarm inputs, alarm outputs, and lane controllers. You can get the live view, play back the video files, and do some other operations of the device through the group.

4.1 Add Group

You can add group to organize the added device for convenient management.

Perform this task if you need to add group for managing device.

Steps

1. Click **Device Management** → **Group** to enter the group management page.
2. Click  to open the Add Group dialog.
3. Set the group name.
 - Create a group name as you want in the **Group Name** field.
 - Check **Create Group by Device Name** to create the new group by the name of the selected device.
4. Click **OK** to add the new group to the group list.

4.2 Import Resources to Group

You can import the device resources (such as encoding channels, alarm input, alarm outputs, etc.) to the added group in a batch.

Before You Start

Add a group for managing devices. Refer to **Add Group**.

Perform this task if you want to import the device resources to group. Here we take importing the device's encoding channels to group as an example.

Steps



Note

Up to 256 encoding channels can be added to one group.

1. Click **Device Management** → **Group** to enter the group management page.
2. Click **Import**.
3. Click **Encoding Channel** tab to enter Import Encoding Channel page.
4. Select the thumbnails/names of the cameras in the thumbnail/list view.



Note

You can click or to switch the camera display mode to thumbnail view or to list view.

5. Select a group from the group list.
-



Note

You can click to add a new group if there is no required group in the list.

6. Import encoding channels to group.
 - Click **Import** to import the selected encoding channels to the selected group.
 - Click **Import All** to import all the encoding channels to the selected group.
 - Click to create a new group named as device name and directly import the corresponding encoding channels to group.

4.3 Edit Channel Parameters

After importing the channels to the group, you can edit the channel's parameters. For encoding channel, you can edit the channel name, stream type, protocol type, etc. For alarm input, zone, and other types of channels, you can edit the channel name.

Before You Start

Import the channels to group. Refer to *Import Resources to Group* .

Perform the following steps to edit the parameters of the channels imported to group. Here we take modifying the encoding channel's parameters as an example.

Steps



Note

For modifying the camera(s) of Cloud P2P device, refer to *Edit Camera Parameters* .

1. Click **Device Management** → **Group** to enter the group management page.

All the added groups are displayed on the left.
2. Click **Encoding Channel** in the group.

The encoding channels imported to the group will display.
3. Open the Modify Camera dialog.
 - Double click the encoding channel.
 - Select the encoding channel and click **Modify**.
4. Edit the camera information, including the camera name, the stream type, etc.

Video Stream

Select the stream for the live view of the camera as desired

Protocol Type

Select the transmission protocol for the camera.

Streaming Protocol

Select the protocol as RTSP or private for getting stream when live view.



Note

You should get stream again to take effect.

Copy to...

Copy the configured parameters to other camera(s).

Refresh

Get a new captured picture for the live view of the camera.



Note

For video stream and protocol type, the new settings will take effect after you reopen the live view of the camera.

5. Click **OK** to save the new settings.



Note

For the IP channel of NVR which supports decoding function:

- After decoding and displaying on video wall, there will be a new channel in the Encoding Channel Resources list whose protocol type is decoding on video wall.
 - After closing the corresponding roaming window, the new channel will be removed from the Encoding Channel Resources list.
-

4.4 Remove Channel from Group

You can remove the added channels from the group.

Perform the following steps to remove the added channels from the group. Here we take encoding channel as an example.

Steps

1. Click **Device Management** → **Group** to enter the group management page.

All the added groups are displayed on the left.

2. Click **Encoding Channel** in the group.

The encoding channels imported to the group will display.

3. Select the encoding channel and click **Delete** to remove the camera from the group.

4. **Optional:** Remove all the encoding channels from the group.

1) Click **Import**.

All the groups and the encoding channels in the groups will display.

2) Move the mouse to the group.

3) Click near the group name to remove all the cameras from the group.

4.5 Delete Group

You can delete the group if needed.

Perform the following steps to delete the group.

Steps

1. Click **Device Management** → **Group** to enter the group management page.
2. Delete the group.
 - Select the group and click .
 - Move the mouse to the group and click .

The selected group and the resource in it will be deleted.

Chapter 5 Live View

For the surveillance task, you can view the live video of the added network cameras, video encoders, and video intercom device on the Main View page. And some basic operations are supported, including picture capturing, manual recording, PTZ control, etc.

The following icons show different statuses of the camera.

	The camera is online and works properly.
	The camera is in live view.
	The camera is in recording status.
	The camera is offline.
	Event (e.g., motion detection) is detected for the camera. The group icon will turn to  .
	The camera is offline, the client can still get the live video via the stream media server if the stream media server is configured. For configuring the stream media server of the camera, refer to .

5.1 Start and Stop Live View

You can start the live view of one camera or all cameras in a group. You can also start the live view in default or custom view mode.

5.1.1 Start Live View for One Camera

You can start the live view of only one camera.

Before You Start

A camera group is required to be defined for live view.

Perform this task if you want to start the live view of one camera.

Steps

1. Open the Main View page.
2. **Optional:** Click  in live view toolbar to select the window division mode for live view.
3. **Optional:** Click  to set the view scale of the live view window. You can set it as **Full Screen**, **4:3**, **16:9**, or **Original Resolution**.

Note

You can also set the view scale for both live view and playback window in System Configuration. For details, refer to **Set Image Parameters**.

4. Do one of the following operations to start the live view of one camera.
 - Drag a camera in the group from camera list to a display window to start the live view.
 - Double-click the camera name after selecting a display window to start the live view.
-

Note

For Cloud P2P device, if the live view or video file(s) of its camera(s) is encrypted, you should input the stream key.

5. **Optional:** Drag the video of the camera in live view to another window to change the display window for live view.
 6. **Optional:** Right click on the camera name in the camera list to switch the stream type according to actual needs.
-

Note

You can click **All Stream Types** to select the frequently used stream types to display on the right-click menu.

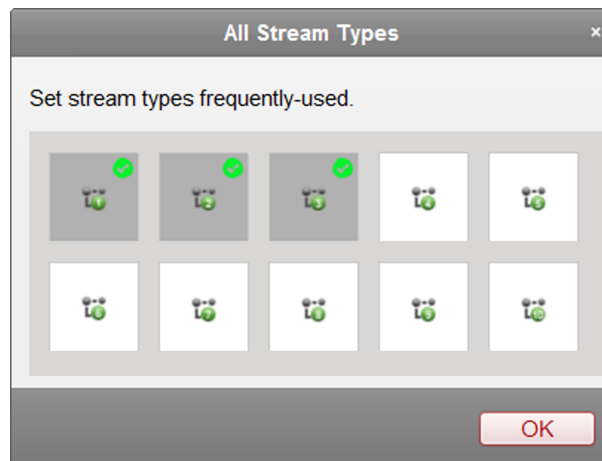


Figure 5-1 Select Frequently Used Stream Types

5.1.2 Start Live View for Camera Group

You can start the live view for all cameras in one group synchronously.

Before You Start

A camera group is required to be defined for live view.

Perform this task when you want to start live view for camera group.

Steps

1. Open the Main View page.
2. **Optional:** Click to set the view scale of the live view window. You can set it as **Full Screen**, **4:3**, **16:9**, or **Original Resolution**.

Note

You can also set the view scale for both live view and playback window in System Configuration. For details, refer to ***Set Image Parameters*** .

3. Perform one of the following operations to start the live view of all cameras in a group.
 - Drag a camera group from camera list to the display window to start the live view.
 - Double-click the group name to start the live view.

Note

The display window number is self-adaptive to the camera number of the group.

4. **Optional:** Right click on the group name in the camera list to switch the stream type for the cameras in the group.

Note

Before switching to the sixth, seventh, eighth, ninth, and tenth stream, you should set these stream type in the device's web configuration page. For details, refer to the user manual of the device.

5.1.3 Start Live View in Default View Mode

The video of the added cameras can display in different view modes. Four frequently-used default view modes are selectable: 1-Window, 4-Windows, 9-Windows, and 16-Windows.

Perform this task when you want to start live view in default view mode.

Steps

1. Open the Main View page.
2. Click to expand the default view list in the View panel.
3. Select the default view mode.

The video of the added cameras displays in a sequence in the selected view.

4. **Optional:** Click to set the view scale of the live view window. You can set it as **Full Screen**, **4:3**, **16:9**, or **Original Resolution**.

Note

You can also set the view scale for both live view and playback window in System Configuration. For details, refer to ***Set Image Parameters*** .

5. **Optional:** Perform the following operation(s) after starting live view in default mode.

Start Instant Playback	Move the cursor over the view and click  to start the instant playback of the view, see <i>Instant Playback</i> for details.
Start Auto-Switch	Move the cursor over the view and click  to start switching automatically of the view, see details in <i>Auto-Switch in Live View</i> .

5.1.4 Add Custom View

You can customize the view mode for live view.

Perform this task when you want to add custom view for live view.

Steps

1. Open the Main View page.
2. Click  in the View panel to create a new view.
3. Input a name for the view as desired.
4. Click **Add** to add the view.
5. **Optional:** Click  in the live view toolbar to set window division mode for the new view.



Note

By default, the new view is in 4-window division.

6. Perform one of the following operations to save the new view settings.
 - Click  to directly save the view.
 - Click  to save the view as another custom view.
7. **Optional:** Perform the following operations after adding the custom view.

Edit View Name Move the cursor over the new view and click  to edit the view name.

Delete View Move the cursor over the new view and click  to delete the view.

5.1.5 Start Live View in Custom View Mode

You can display the video of added cameras in custom view mode.

Before You Start

Customize view modes and add them to the client software, see ***Add Custom View*** for details.

Perform this task when you want to start live view in custom view mode.

Steps

1. Open the Main View page.
2. **Optional:** Click  to set the view scale of the live view window. You can set it as **Full Screen**, **4:3**, **16:9**, or **Original Resolution**.



Note

You can also set the view scale for both live view and playback window in System Configuration. For details, refer to ***Set Image Parameters***.

3. Click  to expand the custom view list in the View panel.
4. Select a custom view.
5. Perform one of the following operations to start live view in custom view mode.
 - Drag camera or camera group to display window to start live view in the selected custom view mode.
 - Double-click camera name or camera group name to start live view in the selected custom view mode.
6. **Optional:** Move the cursor over the view and click  to start instant playback of the view.

5.1.6 Stop Live View

After starting the live view, you can stop it as desired.

Before You Start

Start the live view.

Perform this task when you want to stop the live view.

Steps

1. Select a live view display window on Main View page.
2. Perform one of the following operations to stop the live view.
 - Move the cursor over the display window and click  appeared at the upper-right corner to stop the live view of this display window.
 - Right-click on the display window to open right-click menu and click **Stop Live View** on the menu to stop live view.
 - Click  in live view toolbar to stop all the live view.

5.2 Auto-Switch in Live View

You can auto-switch cameras or views in live view.

When auto-switching in live view, three modes are available:

- Auto-Switch All Cameras in Default View
- Auto-Switch Cameras in a Group
- Auto-Switch Custom Views

5.2.1 Auto-Switch Cameras in a Group

The video stream of the cameras from the same group can switch automatically in a selected display window.

Perform this task when you need to auto-switch cameras in a group.

Steps

1. Open the Main View page.
2. Select a display window for auto-switch.
3. Click  in the toolbar to select or customize the switching interval.
4. Select a group and click  on the group node.

The cameras in the selected group starts auto-switch in the display window.



Note

The audio is off by default after auto-switch starts.

5. **Optional:** Perform the following operation(s) after starting auto-switching cameras in a group.

Pause/Resume Auto-Switch

Click  /  to pause/resume auto-switching cameras in a group.

View Previous/Next Video

Click  /  to view the live video of previous or next camera.

5.2.2 Auto-Switch All Cameras in Default View

The video of all the cameras in the camera list can switch automatically in the selected default view.

Perform this task when you need to auto-switch all cameras in default view.

Steps

1. Open the Main View page.
2. Click  in the toolbar and select or customize the switching interval.
3. Select a default view to click  on the selected view node.

All cameras in the camera list start auto-switching in the selected default view.

4. **Optional:** Perform the following operation(s) after starting auto-switching all cameras in the default view.

Pause/Resume Auto-Switch

Click  /  to pause/resume auto-switching all cameras in default view.

View Previous/Next Video

Click  /  to view the live video of previous or next camera.

5.2.3 Auto-Switch Custom Views

The configured custom views can switch one by one automatically.

Perform this task when you need to auto-switch custom views.

Steps

1. Open the Main View page.
2. Click  in the toolbar and select the switching interval.
3. Click  on the Custom View node.

All configured custom views starts auto-switching.

4. **Optional:** Perform the following operation(s) after starting auto-switching custom views.

Pause/Resume Auto-Switch

Click  /  to pause/resume auto-switching custom views.

View Previous/Next Video

Click  /  to view the live video of previous or next camera.

5.3 PTZ Control

The software provides PTZ control for cameras with pan/tilt/zoom functionality. During the PTZ control, you can set preset, patrol, and pattern, and you can also open a new window for controlling the PTZ.



Note

Cloud P2P device only supports the PTZ movement to the directions of up, down, left, and right.

The following icons are available on the PTZ control panel.

Icon	Name	Description
	Manual Tracking	For speed dome with auto-tracking function, enable the auto-tracking (via right-click menu) for it and click the icon to manually track the target by clicking on the video.
	Menu	For analog speed dome, click the icon to display its local menu. For detailed operation of the menu, refer to user manual of the speed dome.
	One-Touch Patrol	For speed dome with one-touch patrol function, click the icon and the speed dome starts patrol from the predefined preset No.1 to preset No.32 in order after

Icon	Name	Description
		a period of inactivity (park time). For setting the park time, refer to user manual of the speed dome.
	One-Touch Park	For the speed dome with one-touch park function, click the icon and the speed dome saves the current view to the preset No.32. The device starts to park at preset No. 32 automatically after a period of inactivity (park time). For setting the park time, refer to user manual of the speed dome.

5.3.1 Configure Preset

A preset is a predefined image position which contains information of pan, tilt, focus and other parameters.

Perform this task when you need to add a preset for the PTZ camera.

Steps

1. Open the Main View page and start the live view of the PTZ camera.
2. Click  to expand the PTZ Control panel.
3. Click **Preset** to enter the PTZ preset configuration panel.
4. Click the direction buttons and other buttons on the PTZ control panel to steer the camera to the desired view.
5. Select a PTZ preset number from the preset list and click  to open a dialog.
6. Input the name of the preset in the dialog.
7. Click **OK**.
8. **Optional:** Perform the following operation(s) after setting the preset

Call Preset Double-click the configured preset in the list, or select the preset and click  to call the preset. You can also press the number key (e.g., **4**) on keyboard to call the preset 1 to 9, and press **[**, number keys (e.g., **124**), and **]** on keyboard to call the other preset.

Edit Preset Select the configured preset from the list and click  to edit it.

Delete Preset Select the configured preset from the list and click  to delete it.

5.3.2 Configure Patrol

A patrol is a scanning track specified by a group of user-defined presets, with the scanning speed between two presets and the dwell time at the preset separately programmable.

Before You Start

Add two or more presets for one PTZ camera.

Perform this task when you need to add a patrol for the PTZ camera.

Steps



Note

For Cloud P2P device, the patrol function is not supported.

1. Open the Main View page and start the live view of PTZ camera.
2. Click  to expand the PTZ Control panel.
3. Click **Patrol** to enter the PTZ patrol configuration panel.
4. Select a path No. from the drop-down list.
5. Click  to open Add Patrol No. dialog.
6. Set the dwell time and patrol speed for the preset in the dialog.
7. Click **OK**.
8. Repeat step 5, 6, and 7 to add other presets to the patrol.
9. **Optional:** Perform the following operation(s) after setting the patrol.

Call Patrol

Click  to call the patrol.

Stop Calling Patrol

Click  to stop calling the patrol.

Edit Preset in Patrol

Select a preset in the patrol path and click  to edit the preset.

Remove Preset from Patrol

Select a preset in the patrol path and click  to remove the preset from the patrol.

5.3.3 Configure Pattern

A pattern is a memorized, repeating series of pan, tilt, zoom, and preset functions.

Perform this task when you need to add a pattern for the PTZ camera.

Steps



Note

For Cloud P2P device, the pattern function is not supported.

1. Open the Main View page and start the live view of the PTZ camera.
2. Click  to expand the PTZ Control panel.
3. Click **Pattern** to enter the PTZ pattern configuration panel.
4. Click  to start the recording of this pattern path.
5. Use the direction buttons to control the PTZ movement.
6. Click  to stop recording and save the recorded pattern.
7. **Optional:** Perform the following operation(s) after setting the pattern.

Call Pattern

Click  to call the pattern.

Stop Calling Pattern Click  to stop calling the pattern.

Delete Pattern Select one pattern and click  to delete the pattern.

Delete All Patterns Click  to delete all patterns.

5.4 Customize Window Division

The client software provides multiple kinds of predefined window divisions. You can also set custom the window division as desired.

Perform this task when you need to customize the window division.

Steps

Note

Up to 5 window divisions can be customized.

1. Open the Main View or Remote Playback page.
 2. Click  on the live view or playback toolbar.
 3. Select **Edit** to open the custom window division page.
 4. Click **Add** to open the Add Custom Window Division dialog.
 5. Set a name for the new window division as desired and click **OK**.
 6. Select the window division as 3×3, 4×4, 5×5, or 6×6.
-

Note

For remote playback, up to 16 windows can be played at the same time, so the custom window division with more than 16 windows is invalid.

7. **Optional:** Drag your mouse to select the adjacent windows, and click **Joint** to joint them as a whole window.
8. Click **Save**.

What to do next

Click  to go back to the Main View or Remote Playback page.

5.5 Manually Record and Capture

During live view, you can record videos and capture pictures manually, and then view the recorded video files and captured pictures in the local PC.

5.5.1 Manually Record Video

Manual recording function allows to record the live video on the Main View page manually, and you can store the video files in the local PC.

Perform this task when you need to record videos manually.

Steps



Note

The manual recording is not supported by the Cloud P2P device during live view.

1. Open the Main View page.
2. Start the live view
3. Perform one of the following operations to start manual recording.
 - Move the cursor to the display window in live view to show the toolbar and click  on the toolbar.
 - Right-click on the display window and click **Start Recording** on the right-click menu.

The icon  turns to . An indicator  appears in the upper-right corner of the display window.

4. Click  to stop the manual recording.

The recorded video file is automatically saved to the local PC, and a small window with the saving path information appears in the lower-right corner of desktop.



Note

The saving path of the recorded video files can be set on the System Configuration page. See **Set File Saving Path** for details.

5.5.2 View Local Videos

You can view the recorded video files stored in your local PC.

Before You Start

Record the live video.

Perform this task when you need to view the local video files.

Steps

1. Click **File → Open Video File** in the upper-left corner to open the Video Files page.
2. Select the camera to be searched from the Camera Group list.
3. Click  to specify the start time and end time for the search.
4. Click **Search**.

The video files recorded between the start time and end time displays in thumbnail format on the page.

5. Optional: Perform the following operation(s) after the search.

Delete Video File	Select the video file, and click Delete to delete the video file.
Send Email	Select the video file, and click Send Email to send an email notification with the selected video file attached.
 Note	
To send an email notification, the email settings need to be configured before proceeding. For details, refer to <i>Set Email Parameters</i> .	
Save Local Video	Select the video file, and click Save as to save a new copy of the video file.
Playback	Double-click the video file to start the local playback.

5.5.3 Capture Pictures

You can capture pictures during the live view.

Perform this task when you need to capture pictures during the live view.

Steps

1. Open Main View page and start the live view of a camera.
2. Perform one of the following operations to capture pictures.
 - Move the cursor to the display window in live view to show the toolbar and click  on the toolbar.
 - Right-click the display window and click **Capture** on the right-click menu.

The captured picture is automatically saved to the local PC, and a small window with the picture preview and saving path information appears in the lower-right corner of desktop.

Note

The saving path of the captured pictures can be set on the System Configuration page. For details, refer to ***Set File Saving Path*** .

5.5.4 View Captured Pictures

The pictures captured in the live view are stored in the PC running the software. You can view the captured pictures if needed.

Before You Start

Capture pictures in the live view.

Perform this task when you need to view the captured pictures.

Steps

1. Click **File** → **Open Image File** in the upper-left corner to open the Captured Images page.
2. Select the camera to be searched from the Camera Group list.
3. Click  to specify the start time and end time for the search.
4. Click **Search**.

The pictures captured between the start time and end time display in thumbnail format on the page.

5. **Optional:** Perform the following operation(s) after the search.

Enlarge Picture	Double-click the picture thumbnail to enlarge it for a better view.
Delete Picture	Select the captured picture, and click Delete to delete the selected picture.
Send Email	Select the captured picture, and click Send Email to send an email notification with the selected picture attached.
Save Picture	Select the captured picture, and click Save as to save a new copy of the selected picture.

5.6 Instant Playback

Instant playback shows a piece of the video which is remarkable, or which is unclear on the first sight. So you can play the video files instantly on the Main View page and get an immediate review if needed.

Before You Start

Record the video files and store them on the storage devices, such as the SD/SDHC cards and HDDs on the DVRs, NVRs, network cameras, etc., or on the storage servers.

Perform this task when you need to start the instant playback.

Steps

1. Open Main View page and start the live view.
2. Perform one of the following operations to show the pre-play durations' list of instant playback.
 - Move the cursor to the display window to show the toolbar and click .
 - Right-click the display window and select **Switch to Instant Playback** on the right-click menu.
 - Move the cursor to default view or custom view node on the View panel and click .

The list with pre-play durations of 30s, 1 min, 3 min, 5 min, 8 min, and 10 min displays.

3. Select a time period from the appeared list to start the instant playback.

Example

If you select 3 min, and the current time of the live view is 09:30:00, then the instant playback will start from 09:27:00.

During the instant playback, an indicator  appears in the upper-right corner of the display window.

4. **Optional:** Click  again to stop the instant playback and go back for the live view.

5.7 Live View for Fisheye Camera

For fisheye cameras, you can start the live view in fisheye mode, set presets and patrols, and perform PTZ control.

5.7.1 Perform Live View in Fisheye Mode

You can play the live videos of the camera in fisheye expansion mode.

Perform this task when you need to start live view in fisheye mode for fisheye camera.

Steps

1. Open the Main View page and start the live view of fisheye camera.
2. Right-click on the video and select **Fisheye Expansion** to enter the Fisheye Expansion window.
3. Select the mounting type of the fisheye camera according to the actual mounting position.
4. Select the expanding mode for live view as desired.

Fisheye

In the Fisheye view mode, the whole wide-angle view of the camera is displayed. This view mode is called Fisheye because it approximates the vision of a fish's convex eye. The lens produce curvilinear images of a large area, while distort the perspective and angles of objects in the image.

Panorama

In the Panorama view mode, the distorted fisheye image is transformed to normal perspective image by some calibration methods.

PTZ

The PTZ view is the close-up view of some defined area in the Fisheye view or Panorama view, and it supports the electronic PTZ function, which is also called e-PTZ.



Note

Each PTZ view is marked on the Fisheye view and Panorama view with a specific navigation box. You can drag the navigation box on the Fisheye view or Panorama view to adjust the PTZ view, or drag the PTZ view to adjust the view to the desired angle.

5. **Optional:** Perform the following operation(s) after starting live view in fisheye mode.

Capture	Right-click on the window and select Capture to capture the picture in the live view process.
Enter Full Screen	Right-click on a playing window and switch the selected window to full-screen mode.

5.7.2 PTZ Control in Fisheye Mode

In fisheye mode, you can control the PTZ to adjust the PTZ window.



The PTZ panel varies according to different devices.

The following functions are available on the PTZ control panel.

- Select a PTZ window, and click the direction buttons to adjust view angle. Or drag the No. label in the fisheye or panorama window to change the view angle of the PTZ window.
- Select a PTZ window, click  to start auto-scan, and click it again to stop auto-scan.
- Drag the slider on  to adjust the speed for PTZ movement.
- Click  or  , or scroll the mouse wheel to zoom in or zoom out the selected PTZ window.

Configure Preset

In fisheye mode, you can configure the preset which is a user-defined monitor position/point and simply call the preset No. to change the monitor scene to the defined position.

Perform this task when you need to configure preset in fisheye mode.

Steps



Only the specific fisheye cameras support configuring the preset, and up to 256 presets can be configured in fisheye mode.

1. Open Main View page and start the live view of fisheye camera.
2. Right-click on the video and select **Fisheye Expansion** to enter the Fisheye Expansion window.
3. Click **Preset** tab to enter the preset configuration panel.
4. Select a PTZ window and adjust the scene to the place you want to mark as a preset.
5. Click  to open Add Preset window.
6. Input the preset name.
7. Click **OK**.
8. **Optional:** Perform the following operation(s) after configuring the preset.

Call Preset Select the preset and click  to call the configured preset.

Delete Preset Select the preset and click  to delete the configured preset.

Configure Patrol

In fisheye mode, you can configure the patrol, which is a scanning track specified by a group of user-defined presets, with the scanning speed between two presets and the dwell time at the preset separately programmable.

Before You Start

Configure two or more presets.

Perform this task when you need to configure the patrol in fisheye mode.

Steps



Note

Only the specific fisheye cameras support configuring the patrol, and up to 32 patrols can be configured in fisheye mode.

1. Open Main View page and start the live view of fisheye camera.
 2. Right-click on the video and select **Fisheye Expansion** to enter the Fisheye Expansion window.
 3. Click **Patrol** tab to enter the patrol configuration panel.
 4. Select a path No. from the drop-down list.
 5. Click  to open Add Patrol No. window.
 6. Set the dwell time for the preset.
-



Note

The dwell time ranges from 1s to 120s.

7. Click **OK**.
8. Repeat step 5, 6, and 7 to add other presets to the patrol.
9. **Optional:** Perform the following operation(s) after configuring the patrol.

Edit Preset in Patrol

Select a preset in the patrol path and click  to edit the preset.

Remove Preset from Patrol

Select a preset in the patrol path and click  to remove the preset from the patrol.

Call Patrol

Click  to call the patrol.

Stop Calling Patrol

Click  to stop calling the patrol.

5.8 Perform Master-Slave Linkage

The box or bullet camera which supports master-slave tracking function can locate or track the target according to your demand.

Note

- This function is only supported by the specific box or bullet camera.
- A speed dome with the auto-tracking function is required to be installed near the box or bullet camera.

5.8.1 Configure Master-Slave Tracking Rule

Before performing master-slave tracking during live view, you should configure the master-slave tracking rules for the box or bullet camera, including setting VCA detection rule, linking to a speed dome, and calibrating camera and speed dome.

Set Intrusion Detection Rule

You should set the VCA detection rule for the bullet or box camera, and when the VCA event is triggered, the client can trigger speed dome to track the target. Here we take intrusion detection as an example.

Perform this task to set the intrusion detection rule for the bullet or box camera.

Steps

1. Open Device Management page and select a box or bullet camera.
2. Click **Remote Configuration** → **VCA Config** → **Rule** → **Rule Settings** to enter rule settings page.

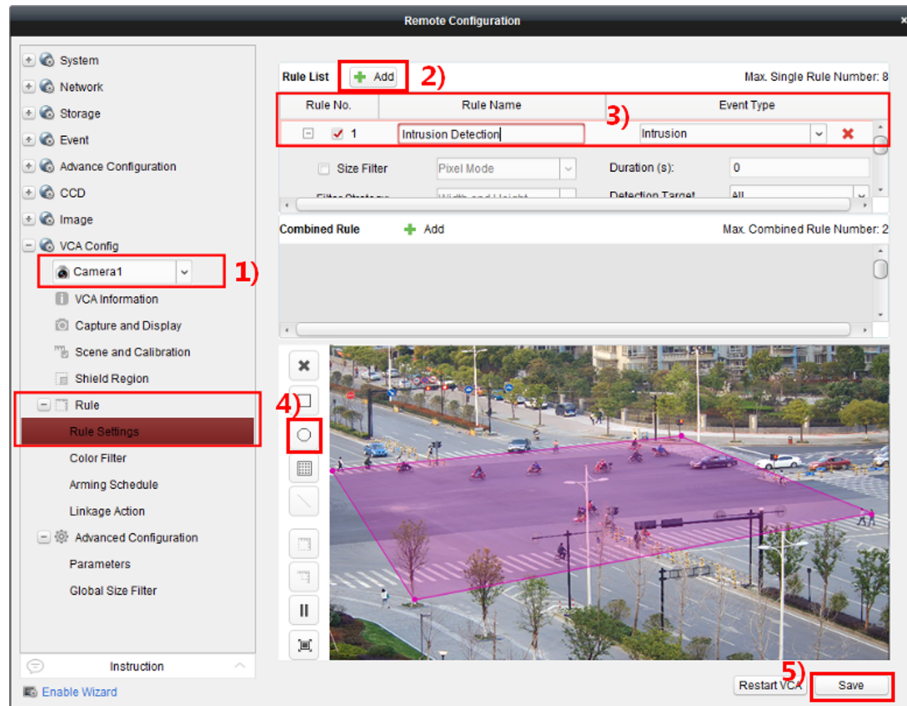


Figure 5-2 Rule Settings

3. Click **Add** in Rule List panel to add a rule.
4. Select **Intrusion** as the event type.
5. Click  to draw a detection region on the live video.
6. Click **Save**.

Link Speed Dome

When configuring the master-slave tracking for the box or bullet camera, you can link the camera to a speed dome and set the PTZ position for the speed dome for tracking.

Perform this task to link the box or bullet camera to a speed dome for master-slave tracking.

Steps

1. Open Device Management page and select a box or bullet camera.
2. Click **Remote Configuration** → **Advanced Configuration** → **Master-Slave Tracking** to enter master-slave tracking settings page.
3. Click **Login** on the display window to open the speed dome login window.

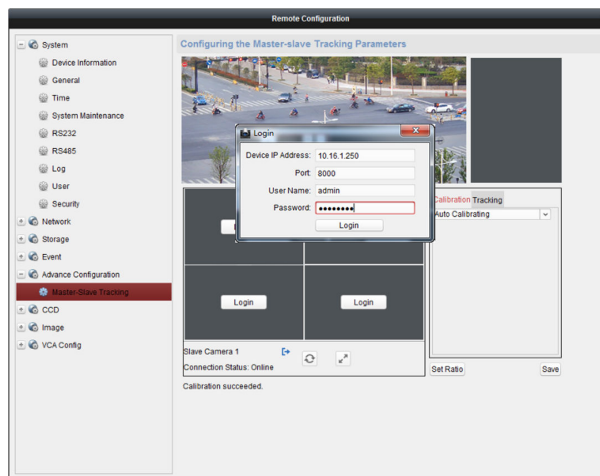


Figure 5-3 Speed Dome Login Window

4. Input the speed dome's IP address, port No., user name, and password.
5. Click **Login** to log in to the speed dome.
6. Click **PTZ** and use the direction arrows to adjust the speed dome to a horizontal position.

What to do next

Calibrate the box or bullet camera and the linked speed dome, see ***Calibrate Camera and Speed Dome Automatically*** or ***Calibrate Camera and Speed Dome Manually*** for details.

Calibrate Camera and Speed Dome Automatically

When setting the bullet or box camera's master-slave tracking rule, you should calibrate the camera and the speed dome. Two calibration modes, including auto and manual, are available, here we introduce the auto calibration.

Before You Start

Link the camera to a speed dome, see *Link Speed Dome* for details.

Perform this task to calibrate the camera and the speed dome automatically.

Steps

1. Open Device Management page and select a box or bullet camera.
2. Click **Remote Configuration → Advanced Configuration → Master-Slave Tracking** to enter master-slave tracking settings page.
3. Select the calibration mode as **Auto Calibrating** in the lower-right corner of Calibration panel.
4. Move and zoom in/out the view of speed dome to make sure the live views of dome and camera are mostly same.
5. Click **Save**.

Calibrate Camera and Speed Dome Manually

When setting the bullet or box camera's master-slave tracking rule, you should calibrate the camera and the speed dome. Two calibration modes, including auto and manual, are available, here we introduce the manual calibration.

Before You Start

Link the camera to a speed dome, see *Link Speed Dome* for details.

Perform this task to calibrate the camera and the speed dome manually.

Steps

1. Open Device Management page and select a box or bullet camera.
2. Click **Remote Configuration → Advanced Configuration → Master-Slave Tracking** to enter master-slave tracking settings page.
3. Select the calibration mode as **Manual Calibrating** in the lower-right corner of Calibration panel.
4. Select site No. 1 from the list and click  .
A blue cross appears in the center of the live view page, and the digital zoom view of the selected site appears on the right.
5. Repeat step 4 to add other manual calibration sites.

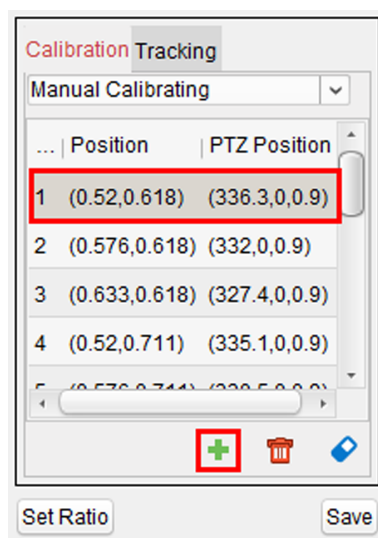


Figure 5-4 Calibration Sites

6. Adjust the distances among the four calibration sites evenly in the live view page.

7. Select the calibration site No. 1.

The digital zoom view of site No. 1 appears at the right.

8. Move and zoom in or out the view of speed dome to make sure the live views of speed dome and the digital zoom view of selected site are mostly same.

9. Click  to save the current site position information.

10. Repeat step 7, 8, and 9 to set other sites' position.

11. Click **Save**.

5.8.2 Enable Master-Slave Tracking

During live view, you can enable the master-slave tracking to locate or track the target appeared in the view of bullet or box camera with a speed dome.

Before You Start

Configure the master-slave tracking rules for the box or bullet camera.

Perform this task when you need to enable the master-slave tracking for box or bullet camera.

Steps

1. Enter the Main View page and start the live view of box or bullet camera.

2. Right-click on the live view window and click **Enable Master-Slave Tracking**.

When the configured VCA rule is triggered by target, the linked speed dome performs the automatic master-slave tracking and the target frame turns from green into red.

5.9 More Functions

There are some more functions supported in the live view, including auxiliary screen preview, digital zoom, channel-zero, camera status, and synchronization.

Auxiliary Screen Preview

Display the live video on different auxiliary screens for the convenient preview of multiple monitoring scenes.



Note

Up to 3 auxiliary screens are supported.

Digital Zoom

Drag the mouse to draw a rectangle area in the lower-right/upper-left direction to zoom in or out the drawn area. Or use the mouse wheel to zoom in or out the view in digital zoom mode.

Channel-Zero

For the channel-zero of the device, hold the **Command** key and double-click to display the specific channel. Hold the **Command** key and double-click again to restore.

Camera Status

The camera status, such as recording status, signal status, connection number, etc., can be detected and displayed for checking. The status information refreshes every 10 seconds.

Synchronization

The synchronization function provides a way to synchronize the device clock with the PC which runs the client software.

Chapter 6 Remote Storage Configuration

The video files and captured pictures can be stored on the HDDs, Net HDDs, or SD/SDHC cards on the local device, or on the storage server connected.

6.1 Store Picture and Video on DVR, NVR, or Network Camera

Some local devices, including the DVRs, NVRs, and Network Cameras, provide storage devices such as the HDDs, Net HDDs and SD/SDHC cards for video and picture files. You can set a recording schedule or capture schedule for the channels of the local devices.

Before You Start

Make sure the newly installed storage devices have been formatted. Refer to ***Format Storage Server's HDD*** for details.

Perform this task when you need to store the picture and video files on the encoding device such as DVR, NVR, or network camera.

Steps



Note

The pictures captured through the capture schedule are stored on the local device and can be searched on the remote configuration page of the device.

1. Enter the Storage Schedule module.
2. Select the camera in the Camera Group list.
3. Set **Recording Schedule** switch or **Capture Schedule** switch to ON on **Storage on Encoding Device** area to enable device local recording or capture.
4. Select the recording or capture schedule template from the drop-down list.

All-day Template

All-day continuous recording.

Weekday Template

Working-hours continuous recording from 8:00 AM to 8:00 PM.

Event Template

All-day event triggered recording.

Template 01 to 08

Fixed templates for specific schedules. You can edit the templates if needed.

Custom

Customize a template as you want.



Note

If you need to edit or customize the template, refer to ***Configure Recording Schedule Template*** or ***Configure Capture Schedule Template***.

5. Click **Advanced** of Recording Schedule to set the recording advanced parameters.
-



Note

The displayed items vary according to the devices.

Pre-record

Normally used for the event triggered record, when you want to record before the event happens.

Post-record

After the event finished, the video can also be recorded for a certain time.

Keep Video Files for

The time for keeping the video files in the storage device, once exceeded, the files will be deleted. The files will be saved permanently if the value is set as 0.

Redundant Record

Save the video files not only in the R/W HDD but also in the redundant HDD.

Record Audio

Record the video files with audio or not.

Video Stream

Select the stream type for the recording.



Note

For specific type of devices, you can select **Dual-Stream** for recording both main stream and sub-stream of the camera. In this mode, you can switch the stream type during remote playback. Refer to ***Normal Playback*** for stream switch during playback.

6. Click **Advanced** of Capture Schedule to set the capture advanced parameters.

Resolution

Select the resolution for the continuous or event captured pictures.

Picture Quality

Set the quality for the continuous or event captured pictures.

Interval

Select the interval which refers to the time period between two capturing actions.

7. **Optional:** Click **Copy to...** to copy the recording schedule settings to other channels.

8. Click **Save** to save the settings.

6.2 Store Picture and Video on Storage Device

You can store the video files and pictures of the added encoding devices on storage device.

You can add storage device to the client for storing the video files and pictures of the added encoding devices and you can search the files for remote playback. The storage device can be Guarding Vision Storage Server, CVR (Center Video Recorder), or other NVR.

Here we take the settings of Guarding Vision Storage Server as an example.



Note

The Guarding Vision Storage Server application software needs to be installed and it is packed in the client installation package. After running the installation package, select **Storage Server** to enable the installation of Guarding Vision Storage Server.

6.2.1 Add Storage Server to Client

You can add storage server to the client for storing the video files and pictures of the added encoding devices.

Perform this task when you need to add storage server.

Steps

1. Open the Device Management page.
2. Click **Device**.
3. Click **Device** to display the device list.
4. Add Guarding Vision Storage Server.
 - You can add online storage server. For details, refer to **Add Single Online Device**.
 - You can add storage server via IP address or domain name. For details, refer to **Add Device by IP Address or Domain Name**

6.2.2 Format Storage Server's HDD

You should format the HDDs of the storage server for the video file and picture storage.

Perform this task to format storage server's HDD.

Steps



Note

Formatting the HDDs is to pre-allocate the disk space for storage and the original data of the formatted HDDs will not be deleted.

1. Open the Device Management page.
2. Click **Device**.
3. Select the added storage server from the list.

4. Click **Remote Configuration**.
5. Click **Storage** → **General** to enter the HDD Formatting window.

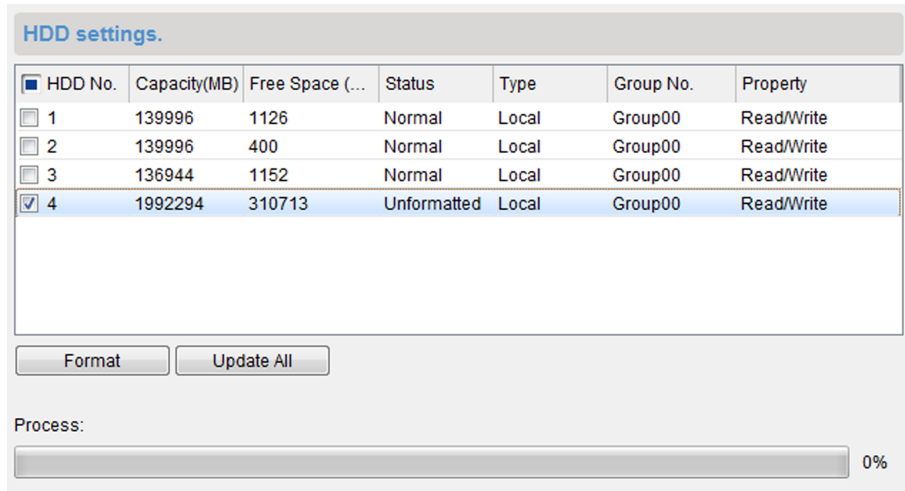


Figure 6-1 HDD Formatting

6. Select the HDD from the list and click **Format**.
You can check the formatting process from the process bar and the status of the formatted HDD changes from **Unformatted** to **Normal Status**.

6.2.3 Configure Storage Settings

When the storage server is available, you can set the recording schedule or capture schedule for the cameras.

Before You Start

The newly installed storage devices need to be formatted.

Perform this task when you need to configure storage settings.

Steps

1. Click **Storage Schedule** on the control panel to open the Storage Schedule page.
2. Select the camera in the Camera Group list.
3. Select a storage server from the **Storage Server** drop-down list.



Note

You can click **Storage Server Management** to add, edit or delete the storage server.

4. Check **Recording Schedule** or **Picture Storage** to enable storing the video files or alarm pictures of the camera when event occurs.
5. **Optional:** For the network cameras with the function of heat map or people counting, check **Additional Information Storage** and click **VCA Config** to set the VCA rule for the camera.

Note

For detailed configuration about setting the VCA rule, refer to user manual of the camera.

You can upload the heat map, people counting data, and road traffic data to the storage server.

6. Select the schedule template for recording or capture from the drop-down list.

Note

If you need to edit or customize the template, refer to ***Configure Recording Schedule Template*** or ***Configure Capture Schedule Template***.

7. **Optional:** For Recording Schedule, click **Advanced Settings** to set the pre-record time, post-record time, video stream, and other parameters.

Note

The Guarding Vision Storage Server only supports main-stream.

8. Click **Set Quota** to set the corresponding quota ratio for record, picture, and additional information.

Example

If you set **Record Quota** as 60%, up to 60% of the storage space can be used for storing the video files.

9. Click **Save** to save the settings.

6.3 Configure Recording Schedule Template

You can edit the recording schedule template, or customize a recording schedule template.

Perform this task if you need to configure the recording schedule template.

Steps

1. Enter the Storage Schedule module.
2. Open the template settings window.
 - Select **Template 01** to **Template 08** from the dropdown list and click **Edit**.
 - Select **Custom** from the drop-down list.
3. Drag on the time-line to set the time periods for the selected template when the cursor turns to .

Continuous

Normal and continuous recording. The schedule time bar is marked with .

Event Recording

The recording is triggered by event. The schedule time bar is marked with .

Command

The recording triggered by command. The schedule time bar is marked with .



Note

Command triggered recording is only available for the ATM transactions when the ATM DVR is added to the client.



Note

Up to 8 time periods can be set for each day in the recording schedule.

4. Optional: After setting the time periods, you can do one or more of the following:

- | | |
|----------------------------|---|
| Move | Drag a time period to move it when the cursors turns to  . |
| Lengthen or Shorten | Select a time period and then lengthen or shorten it when the cursor turns to  . |
| Delete | Select the configured schedule time period and click  to delete it. |
| Delete All | Click  to delete all the configured time periods. |
| Copy to | Select one date and click  to copy the date's time period settings to the other dates. |

5. Optional: For template 01 to 08, you can edit the template name as you want.

6. Click **OK** to save the settings.



Note

If you select **Custom** to customize a template, you can click **Save as Schedule Template**, and then the custom template can be saved as template 01 to 08.

6.4 Configure Capture Schedule Template

You can edit the capture schedule template, or customize a capture schedule template.

Perform this task if you need to configure the capture schedule template.

Steps

1. Enter the Storage Schedule module.
2. Open the template settings window.
 - Select **Template 01** to **Template 08** from the dropdown list and click **Edit**.
 - Select **Custom** from the dropdown list.
3. Drag on the time-line to set time periods for the selected template when the cursor turns to .

Continuous Capture

Normal and continuous capture. The schedule time bar is marked with .

Event Capture

The capture is triggered by event. The schedule time bar is marked with .

4. Optional: After setting the time period, you can do one or more of the followings

- | | |
|----------------------------|--|
| Move | When the cursor turns to  , you can move the time period you just edited. You can also edit the displayed time point to set the accurate time period. |
| Lengthen or Shorten | When the cursor turns to  , you can lengthen or shorten the selected time period. |
| Delete | Select a time period and click  to delete it. |
| Delete All | Click  to delete all the configured time periods. |
| Copy to | Select one date and click  to copy the date's time period settings to the other dates. |

5. Optional: For template 01 to 08, you can edit the template name as you want.

6. Click **OK** to save the settings.



Note

If you select **Custom** to customize a template, you can click **Save as Schedule Template**, and then the custom template can be saved as template 01 to 08.

Chapter 7 Remote Playback

You can search the video files stored in the local device or the storage server by camera or triggering event, and then play them remotely.

Note

You can set to play back the video files stored in the local device, in the storage server, or both in the storage server and local device. For details, refer to ***Set Live View and Playback Parameters*** .

7.1 Switch Video Stream for Playback

Optionally, you can switch the stream type between main stream and sub-stream for playback.

Before You Start

Set the video stream for recording as **Dual-Stream**.

Note

For details, refer to ***Store Picture and Video on DVR, NVR, or Network Camera*** .

Perform this task if you want to switch video stream for playback.

Steps

Note

This function should be supported by device.

1. Open Group Management page.

Note

See ***Group Management*** for details.

2. Open Modify Camera window.

Note

Refer to ***Edit Channel Parameters*** for details.

3. Select the video stream as **Main Stream** or **Sub-Stream** in the **Video Stream** field.
4. Click **OK**.

7.2 Normal Playback

You can search video files by camera or group for normal playback.

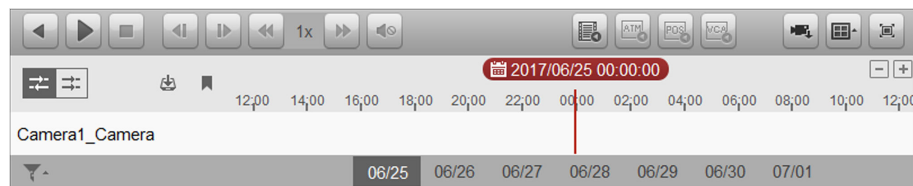


Figure 7-1 Normal Playback Toolbar

Icon	Name	Description
	Single Frame (Reverse)	Play the video files frame by frame (reversely). You can also scroll down the mouse wheel to play the video file frame by frame (reversely).
	Event Playback	Search the video files recorded based on event, such as motion detection, video loss or video tampering.
	ATM Playback	Search the video files of ATM devices.
	POS Playback	Search the video files which contain POS information.
	VCA Playback	Set VCA rule for the searched video files that VCA event occurs, including motion detection, intrusion and line crossing.
	Download for Multiple Cameras	Download video files of multiple cameras at the same time.
	Download	Download the video files of the camera and store them to local PC. You can select to download by file, by date, or by tag.
	Tag	Add default tag for the video file to mark the important video point. You can edit the tag or go to the tag position via the right-click menu.
	Accurate Positioning	Set the accurate time point to play the video file.
	Date	The day that has video files will be marked with

Note

The Cloud P2P device only supports normal playback and it also does not support the functions of reverse playback, slow forward or fast forward, and adding tag.

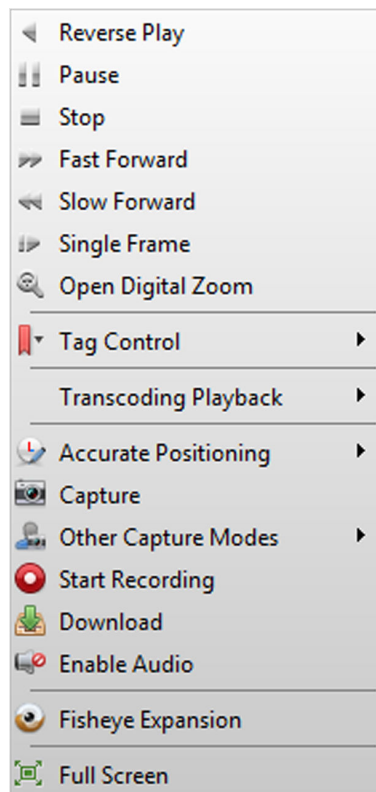


Figure 7-2 Right-Click Menu of Normal Playback Display Window

Icon	Name	Description
	Show/Hide Temperature Information	Enable or disable the temperature information overlay of playback image. Note The temperature information overlay is only supported by thermal camera.
	Tag Control	Add default (the default tag name is TAG) or custom tag (the tag name is customized) for the video file to mark the important video point. You can also edit the tag or go to the tag position conveniently.
	Other Capture Modes	Send Email Capture the current picture and then send an Email notification to one or more receivers. The captured picture can be attached. Custom Capture Capture the current picture. You can edit its name and then save it.
	Fisheye Expansion	Enter the fisheye playback mode. For details, refer to <i>Fisheye Playback</i> .

7.2.1 Search Video Files

You can search the video files by date, and you can also input keyword to filter the matched results for normal playback.

Perform this task if you need to search video files for normal playback.

Steps

1. Open the Remote Playback page.
2. **Optional:** Click  to set the start date and end date of searching time period.

Note

In the calendar, the date which has video files recorded by schedule will be marked with , and the date which has video files recorded based on event will be marked with .

3. Start the playback of camera(s) to search the video files of the selected camera(s). You can do one of the followings to start the playback.

Note

Up to 16 cameras can be searched simultaneously.

- Drag the camera or group to a display window.
- Select a display window and double-click the camera or group to start.

The matched video files of the selected group or camera will display on the right of the Remote Playback page in chronological order. And by default, the first video file will play automatically.

4. **Optional:** Input keyword in the **Filter** field to filter the results.

7.2.2 Play Video Files

After searching the video files for the normal playback, you can play the video via file list or timeline.

Perform this task if you need to play the video files.

Steps

1. Open the Remote Playback page.
2. Search the video files.
3. Play video via file list or timeline.
 - Select the video file from the search result list, and click  on the video file or double-click the video file to play the video in the playback display window.
 - Click on the timeline to positioning the desired video segment of specified time for normal playback.

Note

- The timeline indicates the time duration for the video files, and the video files of different types are color coded.
 - You can use mouse wheel or click  /  to scale up or scale down the timeline bar.
-

7.3 Alarm Input Playback

When the alarm input is triggered and the linked video can be searched for alarm input playback. This function requires the support of the connected device.

For the description of the alarm input playback toolbar and right-click menu of display window, refer to **Normal Playback**.

Note

Some icons may be not available for alarm input playback.

7.3.1 Search Video Files

You can search the video files by date, and you can also input keyword to filter the matched results for alarm input playback.

Perform this task when you need to search video files for alarm input playback.

Steps

1. Open the Remote Playback page.
2. Click  to show the Alarm Input panel at the left.
3. **Optional:** Click  to set the start date and end date of searching time period.
4. Start the playback of alarm input(s) to search the video files of the selected alarm input(s). You can do one of the followings to start the playback.
 - Drag the alarm input to a display window.
 - Select a display window and double-click the alarm input to start.

The matched video files of the selected alarm input will display on the right of the Remote Playback page in chronological order. And by default, the first video file will play automatically.

5. **Optional:** Input keyword in the **Filter** field to filter the results.

7.3.2 Play Video Files

After searching the video files for the alarm input playback, you can play the video via file list or timeline.

Perform this task when you want to play the video files of alarm input.

Steps

1. Open the Remote Playback page.
2. Click  to show the Alarm Input panel at the left.
3. Search the video files of the alarm input.



Note

See **Search Video Files** for details about searching video files of the alarm input.

4. Play video via file list or timeline.
 - Select the video file from the search result list, and click  on video file, or double-click the video file to play the video in the playback display window.
 - Click on the timeline to positioning the desired video segment of specified time for alarm input playback.



Note

- The timeline indicates the time duration for the video files, and the video files of different types are color coded.
 - You can use mouse wheel or click  /  to scale up or scale down the timeline bar.
-

7.4 Event Playback

The recorded video files triggered by event, such as motion detection, VCA detection, can be searched for event playback. This function requires the support of the connected device.

For the description of the event playback toolbar and right-click menu of display window, refer to **Normal Playback** .



Note

Some icons may be not available for event playback.

7.4.1 Search Video Files

You can search the video files by date and by event type. And you can also input keyword to filter the matched results for event playback.

Perform this task when you want to search video files for event playback.

Steps

1. Open the Remote Playback page.
2. Select the camera and start the normal playback.



Note

For details about starting normal playback, refer to **Play Video Files** .

3. Click  to enable event playback.

By default, the video files recorded based on motion detection will be searched.

4. **Optional:** Click  to set the start date and end date of searching time period.



Note

In the calendar, the date which has video files recorded by schedule will be marked with , and the date which has video files recorded based on event will be marked with .

5. Select the event type from the drop-down list to start searching.

The matched video files will display on the right of the Remote Playback page in chronological order. And by default, the first video file will play automatically.

6. **Optional:** Input keyword in the **Filter** field to filter the results.

7.4.2 Play Video Files

After searching the video files for the event playback, you can play the video via file list or timeline.

Before You Start

Start the normal playback of the cameras.

Perform this task when you want to play the video files recorded based on event.

Steps

1. Open the Remote Playback page.
2. Click  on Remote Playback page to enable event playback.
3. Search the video files recorded based on event.
4. Play the video file.
 - Select the video file from the search result list, and click  on the video file, or double-click the video file to play the video in the playback display window.
 - Click on the timeline to positioning the desired video segment of specified time for event playback.



Note

- The timeline indicates the time duration for the video files, and the video files of different types are color coded.
 - You can use mouse wheel or click  /  to scale up or scale down the timeline bar.
-

7.5 ATM Playback

You can search the video files of ATM DVR for ATM playback. This function requires the support of the connected device which is configured with transaction rule.

For the description of the ATM playback toolbar and right-click menu of display window, refer to **Normal Playback**.



Note

Some icons may be not available for ATM playback.

7.5.1 Search Video Files

You can search the video files of ATM DVR by card number, by transaction type, by transaction amount, by file type, or by date. And you can also input keyword to filter the matched results for ATM playback.

Perform this task when you want to search video files for ATM playback.

Steps

1. Open the Remote Playback page.
 2. Select the camera of ATM DVR and start the normal playback.
-



Note

For details about starting normal playback, refer to ***Play Video Files***.

3. Click  to enable ATM playback.
4. Set the search conditions.

by Card Number

Input the card number contained in the ATM information.

by Transaction Type and Amount

Select transaction type for search, and input the related transaction amount.

by File Type

Select the type of video files for search.

by Date

Click  to set the start date and end date of searching time period.

5. Click **Search** to start searching.

The matched video files of selected ATM DVR will display on the right of the Remote Playback page in chronological order. By default, the first video file will play automatically.

6. **Optional:** Input keyword in the **Filter** field to filter the results.

7.5.2 Play Video Files

After searching the video files of the cameras connected with ATM DVR, you can play the video via file list or timeline.

Before You Start

Start the normal playback of cameras connected with ATM DVR.

Perform this task when you want to play the video files of cameras connected with ATM DVR.

Steps

1. Open the Remote Playback page.
2. Click  on Remote Playback page to enable ATM playback.
3. Search the video files of cameras connected with ATM DVR.
4. Play the video file.
 - Select the video file from the search result list, and click  on the video file, or double-click the video file to play the video in the playback display window.
 - Click on the timeline to positioning the desired video segment of specified time for ATM playback.



Note

- The timeline indicates the time duration for the video files, and the video files of different types are color coded.
 - You can use mouse wheel or click  /  to scale up or scale down the timeline bar.
-

7.6 POS Playback

You can search the video files which contain POS information for POS playback. This function requires the support of the connected device which is configured with POS text overlay.

For the description of the POS playback toolbar and right-click menu of display window, refer to **Normal Playback** .



Note

Some icons may be not available for POS playback.

7.6.1 Search Video Files

You can search the video files which contain POS information by keywords or by date.

Perform this task when you want to search video files for POS playback.

Steps

1. Open the Remote Playback page.
2. Select the camera and start the normal playback.



Note

For details about starting normal playback, refer to **Play Video Files** .

3. Click  to enable POS playback.
4. Set the search conditions.

by Keywords

Input the card number contained in the ATM information.



Note

Up to three keywords can be inputted for once. And each two keywords should be separated with a comma.

by Filter

For more than one keyword, you can select "or (|)" to search the POS information containing any of the keywords, or select "and(&)" to search the POS information containing all of the keywords.

by Case Sensitive

Check **Case Sensitive** to search the POS information by case-sensitive keywords.

by Date

Click  to set the start date and end date of searching time period.

5. Click **Search** to start searching.

The video files contain POS information will display on the right of the Remote Playback page in chronological order. And by default, the first video file will play automatically.

6. **Optional:** Input keyword in the **Filter** field to filter the results.

7.6.2 Play Video Files

After searching the video files which contain POS information, you can play the video via file list or timeline.

Before You Start

Start the normal playback of cameras configured with POS information overlay.

Perform this task when you want to play the video files which contain POS information.

Steps

1. Open the Remote Playback page.
2. Click  on Remote Playback page to enable POS playback.
3. Search the video files which contain POS information.
4. Play video via file list or timeline.
 - Select the video file from the search result list, and click  on the video file, or double-click the video file to play the video in the playback display window.
 - Click on the timeline to positioning the desired video segment of specified time for POS playback.



Note

- The timeline indicates the time duration for the video files, and the video files of different types are color coded.
 - You can use mouse wheel or click  /  to scale up or scale down the timeline bar.
-

7.7 VCA Playback

You can set VCA rule to the searched video files and find the video that VCA event occurs, including motion, intrusion, and line crossing. This function helps to search out the video that you may be more concerned and mark it with red color.

Perform this task when you need to set VCA rule and find the video that VCA event occurs.

Steps

Note

For some devices, you can filter the searched video files by setting the advanced attributes, such as the gender and age of the human and whether he/she wears glasses.

1. Open the Remote Playback page.
2. Select the camera and start the normal playback.

Note

Refer to **Play Video Files** for details.

3. Click  to enter the VCA playback interface.
4. Select the VCA Type, draw the detection region and set the sensitivity.

Motion Detection

Get all the related motion detection events that occurred in the pre-defined region.

Intrusion Detection

Detect whether there are people, vehicles and other moving objects intruding into the pre-defined region.

Line Crossing Detection

Bi-directionally detect people, vehicles and other moving objects that cross a virtual line.

Set Detection Region for Motion

Click , and then click and move on the playback window to set the grid rectangle as the detection region.

Set All the Area as Detection Region for Motion

Click , to set all the area shot by the camera as the detection region.

Set Vertex of Detection Region for Intrusion

Click , and then click on the playback window to set the vertex for the detection region.

Set Detection Line for Line Crossing

Click , and then drag on the playback window to set the detection line.

Delete Drawn Region or Line

Click .

Note

For Intrusion and Line Crossing, you can click **Advanced Attributes** and filter the searched video files by setting the target characters, such as the gender and age of the human and whether he/she wears glasses. This function should be supported by the device.

5. **Optional:** Click  to set the start date and end date of searching time period.

6. Click **Search**.

The VCA events occurred in the defined area will be red marked on the timeline.

Note

- By default, the playback speed of concerned video will be 1X, and the playback speed of unconcerned video will be 8X.
 - You can set to skip the unconcerned video during VCA playback in System Configuration and the unconcerned video won't be played during VCA playback. Refer to **Set Live View and Playback Parameters** for details.
-

7. Play the video files after searching.

Note

- Refer to **Play Video Files** for the description of the playback control toolbar and right-click menu.
 - Some icons may not available for VCA playback.
-

7.8 Synchronous Playback

In synchronous playback, the video files can be played back in synchronization.

Perform this task when you need to play the video files in synchronization.

Steps

Note

Video files from up to 16 cameras can be played back simultaneously.

1. Open the Remote Playback page.
 2. Start normal playback of at least two cameras.
-

Note

Refer to **Play Video Files** for details.

3. Click  in the toolbar to enable the synchronous playback.
The camera under playback will start synchronous playback.
 4. Click  to disable the synchronous playback.
-

7.9 Fisheye Playback

You can play the video files of a fisheye camera in fisheye expansion mode.

Perform this task when you need to play video files of fisheye camera in fisheye expansion mode.

Steps



Note

For other playback control instruction, refer to **Normal Playback** . Some icons may not be available for fisheye playback.

1. Open the Remote Playback page.
2. Select a fisheye camera to start playback.



Note

For detailed configuration about playback and playback control, refer to **Normal Playback** .

3. Right-click on the video file and select **Fisheye Expansion** to enter the Fisheye Expansion mode.



Note

The mounting type in playback of fisheye expansion is set according to the mounting type in live view. For details, refer to **Perform Live View in Fisheye Mode**

4. Select the expanding mode for playback as you desired.

Fisheye

In the Fisheye view mode, the whole wide-angle view of the camera is displayed. This view mode is called **Fisheye** because it approximates the vision of a fish's convex eye. The lens produces curvilinear images of a large area, while distorting the perspective and angles of objects in the image.

Panorama / Dual-180° Panorama / 360° Panorama

In the Panorama view mode, the distorted fisheye image is transformed to normal perspective image by some calibration methods.

PTZ

The PTZ view is the close-up view of some defined area in the Fisheye view or Panorama view, and it supports the electronic PTZ function, which is also called e-PTZ.



Note

Each PTZ view is marked on the Fisheye view and Panorama view with a specific navigation box. You can drag the navigation box on the Fisheye view or Panorama view to adjust the PTZ view, or drag the PTZ view to adjust the view to the desired angle.

5. **Optional:** Right-click on a playing window and you can switch the selected window to full-screen mode.



Note

You can press **Esc** key on the keyboard or right-click on the window and select **Quit Full Screen** to exit the full-screen mode.

Chapter 8 Download Video Files

During playback, you can download the video files of one camera or multiple cameras to the local PC by file, by date, or by tag.



You cannot download the video files of Cloud P2P device.

8.1 Download by File

During playback, you can download the video files of the camera to the local PC by file.

Perform the following steps to download the video files by file.

Steps

1. Enter Playback page and select a camera to start playback.



For details about starting playback, refer to *Remote Playback* .

2. Click  on the toolbar to open Video File Downloading page.
The video files of the selected camera displays on the page.
3. Check the video file(s).
The total size of the selected file(s) is calculated and shown at the bottom.
4. Click **Download** to start downloading the selected file(s) to the local PC.
5. **Optional:** Input the flow and click **Set** to control the downloading speed.



The flow should be between 0 Kbps and 32,768 Kbps.

6. **Optional:** Click **Stop** to stop downloading manually.

8.2 Download by Date

During playback, you can download the video files of the camera to the local PC by date.

Perform the following steps to download the video files by date.

Steps

1. Enter Remote Playback page and select a camera to start playback.

Note

For details about starting playback, refer to **Remote Playback** .

2. Click  on the toolbar to open File Download page.
 3. Click **Download by Date** tab in the File Download page.
 4. Check the duration(s) to enable and click  to set the start and end time.
The total size of the videos in the configured duration(s) is calculated and shown at the bottom.
 5. Click **Download** to start downloading the video file(s) of the configured duration(s) to the local PC.
-

Note

The progress bar shows the downloading process.

6. **Optional:** Input the flow and click **Set** to control the downloading speed.
-

Note

The flow should be between 0 Kbps and 32,768 Kbps.

7. **Optional:** Click **Stop** to stop downloading manually.
-

Note

When downloading video file of one time duration, you can set to merge the downloaded video files in the configured time duration. For merging downloaded video files, refer to **Set Live View and Playback Parameters** .

8.3 Download by Tag

During playback, you can download the video files of the camera to the local PC by tag.

Perform the following steps to download the video files by tag.

Steps

1. Enter Remote Playback page and select a camera to start playback.
-

Note

For details about starting playback, refer to **Remote Playback** .

2. Click  on the toolbar to open File Download page.
 3. Click **Download by Tag** tab on the File Download page.
All added tags displays on the page.
 4. Check the tag(s) to select the video file(s) in the time period of 30 seconds before and after the tag time.
The total size of the selected video file(s) is calculated and shown at the bottom.
-

5. Click **Download** to start downloading the selected file(s) to the local PC.
6. **Optional:** Input the flow and click **Set** to control the downloading speed.



Note

The flow should be between 0 Kbps and 32,768 Kbps.

7. **Optional:** Click **Stop** to stop downloading manually.

8.4 Download for Multiple Cameras

During the playback of multiple cameras, you can download the video files of multiple cameras by date simultaneously.

Perform the following steps to download the video files of multiple cameras by date simultaneously.

Steps

1. Enter Playback page and select multiple cameras to start playback.



Note

For details about starting playback, refer to *Remote Playback*.

2. Click  to open the Download for Multiple Cameras page.
3. Check the cameras to enable the corresponding video duration settings.
4. Set the start time and end time of video duration for each camera.
5. Click **Download** to start downloading the video files of the configured duration(s) to the local PC.

The progress bar shows the downloading process.

6. **Optional:** Input the flow and click **Set** to control the downloading speed.



Note

The flow should be between 0 Kbps and 32,768 Kbps.

7. **Optional:** Click **Stop** to stop downloading manually.



Note

Up to 16 cameras' video files can be downloaded simultaneously.

Chapter 9 Event and Alarm

You can configure the alarm of the added resources and set the linkage actions so that when the alarm is triggered, you can view the alarm details.

9.1 Alarm Configuration

You can add event detections for the added resources, such as camera, alarm input, device, and trigger the linkage actions when the event occurs. For example, when motion is detected, an audible warning appears or video recording starts.

Note

- The event detection should be supported by the device before you can configure it.
 - The event types of camera event vary according to different devices. Here we take the configuration of some event types as examples. For other types, refer to the user manual of the device.
-

9.1.1 Configure Motion Detection Alarm

A motion detection alarm is triggered when the client software detects motion within its defined area. You can set linkage actions, including alarm output, channel record, and client action for the alarm.

Perform this task when you need to configure the motion detection alarm.

Steps

Note

The configuration varies according to different devices, see the user manual of the devices for details.

1. Open the Event Management page and click **Camera Event** tab.
2. Select the camera to be configured and select **Motion Detection** as the event type.
3. Check **Enable** to enable the motion detection.
4. Check **Enable Dynamic Analysis** to mark the detected objects with green rectangles in live view and playback.
5. Select the arming schedule template from the Arming Schedule field.

All-day Template

For all-day continuous arming.

Weekday Template

For working-hours continuous arming from 8:00 AM to 8:00 PM.

Template 01 to 09

Fixed templates for special schedules. You can edit the templates if needed.

Custom

Customize template as desired, see **Configure Arming Schedule** for details.

6. **Optional:** Select **Normal** or **Expert** as the configuration type for some cameras.
-



Note

Expert mode is mainly used to configure the sensitivity and proportion of object on area of each area for different day/night switch. For details, refer to the user manual of the device.

7. Select the triggered camera.
-



Note

To capture the picture of the triggered camera when the selected event occurs, you can also set the capture schedule and the storage in Storage Schedule. For details, refer to **Remote Storage Configuration**.

The image or video from the triggered camera pops up or displays on the video wall when motion detection alarm occurs.

8. Draw a defined area for the arming region.
- Drag the mouse to draw.
 - Click  to set the whole video area as detection area.
-



Note

You can click  to clear all the detection area.

9. Drag the slider on the sensitivity bar to adjust the motion detection sensitivity.
-



Note

The larger the value is, the more sensitive the detection is.

10. Check the linkage action(s) for the alarm.

Alarm Output

Enable the alarm output function. Select the alarm output port and the external device connected to the port can be controlled.

Channel Record

Start the recording of the selected cameras when alarm is triggered.

Audible Warning

The client software gives an audible warning when alarm is triggered. You can select the alarm sound for audible warning. For setting the alarm sound, refer to **Set Alarm Sound**.

Email Linkage

Send an email notification of the alarm information to one or more receivers.

Alarm on E-map

Display the alarm information on the E-map.

Alarm Triggered Pop-up Image

The image with alarm information pops up when alarm is triggered.



You should set the triggered camera first, see step 7 in this task for details.

Alarm Triggered Video Wall Display

Display the video of the triggered camera on the video wall when alarm is triggered.



You should set the triggered camera first, see step 7 in this task for details.

11. Click **Copy to...** to copy the alarm parameters to other channels

12. Click **Save**.

9.1.2 Configure Video Tampering Alarm

A video tampering alarm is triggered when the camera is covered and the monitoring area cannot be viewed. You can set the linkage actions, including alarm output and client action.

Perform this task when you need to configure the video tampering alarm.

Steps



The configuration varies according to different devices, see the user manual of the devices for details.

1. Open the Event Management page and click the **Camera Event** tab.
2. Select the camera to be configured and select **Video Tampering Detection** as the event type.
3. Check **Enable** to enable the video tampering detection.
4. Select the arming schedule template from the **Arming Schedule** field.

All-day Template

For all-day continuous arming.

Weekday Template

For working-hours continuous arming from 8:00 AM to 8:00 PM.

Template 01 to 09

Fixed templates for special schedules. You can edit the templates if needed.

Custom

Customize template as desired, see **Configure Arming Schedule** for details.

5. Select the triggered camera.



To capture the picture of the triggered camera when the selected event occurs, you can also set the capture schedule and the storage in Storage Schedule. For details, refer to **Remote Storage Configuration**.

The image or video from the triggered camera pops up or displays on the video wall when video tampering alarm occurs.

6. Draw a defined area for the arming region.

- Drag the mouse to draw.
- Click  to set the whole video area as the detection area.



Click  to clear the detection area.

7. Drag the slider on the sensitivity bar to adjust the tampering alarm sensitivity.

8. Check the linkage action(s) for the alarm.

Alarm Output

Enable the alarm output function. Select the alarm output port and the external device connected to the port can be controlled.

Audible Warning

The client software gives an audible warning when alarm is triggered. You can select the alarm sound for audible warning. For setting the alarm sound, refer to **Set Alarm Sound**.

Email Linkage

Send an email notification of the alarm information to one or more receivers.

Alarm on E-map

Display the alarm information on the E-map.

Alarm Triggered Pop-up Image

The image of the triggered camera pops up when alarm is triggered.



You should set the triggered camera first, see step 5 in this task for details.

Alarm Triggered Video Wall Display

Display the video of the triggered camera on the video wall when alarm is triggered.



You should set the triggered camera first, see step 5 in this task for details.

9. **Optional:** Click **Copy to...** to copy the alarm parameters to other cameras.

10. Click **Save**.

9.1.3 Configure Video Loss Alarm

When the client software cannot receive video signal from the front-end devices, the video loss alarm is triggered. You can set the linkage actions, including alarm output and client action for the alarm.

Perform this task when you need to configure video loss alarm.

Steps



Note

The configuration varies according to different devices, see the user manual of the devices for details.

1. Open the Event Management page and click **Camera Event** tab.
2. Select the camera to be configured and select **Video Loss** as the event type.
3. Check **Enable** to enable the video loss alarm.
4. Select the arming schedule template from the **Arming Schedule** field.

All-day Template

For all-day continuous arming.

Weekday Template

For working-hours continuous arming from 8:00 AM to 8:00 PM.

Template 01 to 09

Fixed templates for special schedules. You can edit the templates if needed.

Custom

Customize template as desired, see **Configure Arming Schedule** for details.

5. Select the triggered camera.
-



Note

To capture the picture of the triggered camera when the selected event occurs, you can also set the capture schedule and the storage in Storage Schedule. For details, refer to .

The image or video from the triggered camera pops up or displays on the video wall when the video loss alarm occurs.

6. Check the linkage action(s) for the alarm.

Alarm Output

Enable the alarm output function. Select the alarm output port and the external device connected to the port can be controlled.

Audible Warning

The client software gives an audible warning when alarm is triggered. You can select the alarm sound for audible warning. For setting the alarm sound, refer to **Set Alarm Sound** .

Email Linkage

Send an email notification of the alarm information to one or more receivers.

Alarm on E-map

Display the alarm information on the E-map.

Alarm Triggered Pop-up Image

The image of the triggered camera pops up when alarm is triggered.



You should set the triggered camera first, see step 5 in this task for details.

Alarm Triggered Video Wall Display

Display the video of the triggered camera on the video wall when alarm is triggered.



You should set the triggered camera first, see step 5 in this task for details.

- 7. **Optional:** Click **Copy to...** to copy the alarm parameters to other cameras.
- 8. Click **Save**.

9.1.4 Configure Audio Exception Alarm

The abnormal sounds, such as the silence, environment noise, and current noise, can be detected. Perform this task when you need to configure the audio exception alarm.

Steps



The audio exception alarm requires the support of the connected device.

- 1. Open the Event Management page and click **Camera Event** tab.
- 2. Select the camera to be configured and select **Audio Exception Detection** as the event type.
- 3. Perform the following operation(s) to enable the related function of audio detection alarm.

Audio Input Detection	Check Audio Input Detection to detect the exceptions of audio input condition.
Sudden Increase of Sound Intensity	Check Sudden Increase of Sound Intensity to detect the sudden increase of the sound intensity, and it consists the settings of sensitivity and sound intensity threshold.
	 Note Sensitivity

Range [1 to 100]. The smaller the value, the more severe the change should be to trigger the detection.

Sound Intensity Threshold

Range [1 to 100]. The sound in the environment can be filtered, the louder the environment sound, the higher the value should be. You can adjust it according to the real environment.

Sudden Decrease of Sound Intensity

Check **Sudden Decrease of Sound Intensity** to detect the sudden decrease of the sound intensity, by which you can find the abnormal silent. For example, the electric generator makes loud noise when it's working, so it should be paid attention to if the noise drops down suddenly.

4. Select the arming schedule template the **Arming Schedule** field.

All-day Template

For all-day continuous arming.

Weekday Template

For working-hours continuous arming from 8:00 AM to 8:00 PM.

Template 01 to 09

Fixed templates for special schedules. You can edit the templates if needed.

Custom

Customize template as desired, see **Configure Arming Schedule** for details.

5. Select the triggered camera.



Note

To capture the picture of the triggered camera when the selected event occurs, you can also set the capture schedule and the storage in Storage Schedule. For details, refer to **Remote Storage Configuration**.

The image or video from the triggered camera pops up or displays on the video wall when audio exception alarm occurs.

6. Check the linkage action(s) for the alarm.

Alarm Output

Enable the alarm output function. Select the alarm output port and the external device connected to the port can be controlled.

Recording

Start the recording of the selected cameras when alarm is triggered.

Audible Warning

The client software gives an audible warning when alarm is triggered. You can select the alarm sound for audible warning. For setting the alarm sound, refer to **Set Alarm Sound**.

E-mail Linkage

Send an email notification of the alarm information to one or more receivers.

Alarm on E-map

Display the alarm information on the E-map.

Alarm Triggered Pop-up Image

The image of the triggered camera pops up when alarm is triggered.



Note

You should set the triggered camera first, see step 5 in this task for details.

Alarm Triggered Video Wall Display

Display the video of the triggered camera on the video wall when alarm is triggered.



Note

You should set the triggered camera first, see step 5 in this task for details.

7. **Optional:** Click **Copy to...** to copy the alarm parameters to other cameras.

8. Click **Save**.

9.1.5 Configure Face Detection Alarm

Face detection helps to detect the human faces within the monitoring area automatically. And a series of linkage actions will be triggered if any object is detected.

Perform this task when you need to configure the face detection alarm.

Steps



Note

The face detection function requires the support of the connected device.

1. Enter the Event Management page and click **Camera Event** tab.
2. Select the camera to be configured and select **Face Detection** as the event type.
3. Check **Enable** to enable the face detection alarm.
4. Select the arming schedule template from the **Arming Schedule** field.

All-day Template

For all-day continuous arming.

Weekday Template

For working-hours continuous arming from 8:00 AM to 8:00 PM.

Template 01 to 09

Fixed templates for special schedules. You can edit the templates if needed.

Custom

Customize template as desired, see **Configure Arming Schedule** for details.

5. Select the triggered camera.



Note

To capture the picture of the triggered camera when the selected event occurs, you can also set the capture schedule and the storage in Storage Schedule. For details, refer to **Remote Storage Configuration**.

The image or video from the triggered camera pops up or displays on the video wall when face detection alarm occurs.

6. Set the sensitivity for face detection.
7. **Optional:** Check **Enable Dynamic Analysis for Face Detection** to mark the detected faces with rectangle in the live view.
8. Check the linkage action(s) for the alarm.

Alarm Output

Enable the alarm output function. Select the alarm output port and the external device connected to the port can be controlled.

Channel Record

Start the recording of the selected cameras when alarm is triggered.

Audible Warning

The client software gives an audible warning when alarm is triggered. You can select the alarm sound for audible warning. For setting the alarm sound, refer to **Set Alarm Sound**.

Email Linkage

Send an email notification of the alarm information to one or more receivers.

Alarm on E-map

Display the alarm information on the E-map.

Alarm Triggered Pop-up Image

The image of the triggered camera pops up when alarm is triggered.



Note

Set the triggered camera first, see step 5 in this task for details.

Alarm Triggered Video Wall Display

Display the video of the triggered camera on the video wall when alarm is triggered.



Note

Set the triggered camera first, see step 5 in this task for details.

9. **Optional:** Click **Copy to...** to copy the alarm parameters to other cameras.
10. Click **Save**.

9.1.6 Configure Line Crossing Detection Alarm

Line crossing detection can be used for detecting people, vehicles and objects crossing a predefined virtual line. The crossing direction can be set as bidirectional, from left to right, or from right to left. And a series of linkage actions will be triggered if any object is detected.

Perform this task when you need to configure the line crossing detection alarm.

Steps



This line crossing detection function requires the support of connected device.

1. Enter the Event Management page and click **Camera Event** tab.
 2. Select the camera to be configured and select **Line Crossing Detection** as the event type.
 3. Check **Enable** to enable the line crossing detection alarm.
-



For the specific speed dome, you can click **Lock** to prevent the speed dome from moving automatically during the configuration.

4. Select the arming schedule template from the **Arming Schedule** field.

All-day Template

For all-day continuous arming.

Weekday Template

For working-hours continuous arming from 8:00 AM to 8:00 PM.

Template 01 to 09

Fixed templates for special schedules. You can edit the templates if needed.

Custom

Customize template as desired, see **Configure Arming Schedule** for details.

5. Select the triggered camera.
-



To capture the picture of the triggered camera when the selected event occurs, you can also set the capture schedule and the storage in Storage Schedule. For details, refer to **Remote Storage Configuration**.

The image or video from the triggered camera pops up or displays on the video wall when line crossing detection alarm occurs.

6. Configure the arming line.
 - 1) Choose an ID for the virtual line.

Note

For some specific speed dome, you can click **PTZ** to move the speed dome to the desired scene which corresponds to a virtual line ID. In this way, you can configure the different line crossing detection alarms for multiple views.

-
- 2) Select the virtual line direction as A<->B, A ->B, or B->A.

A<->B

When an object going across the line with both directions, it can be detected and alarms are triggered.

A->B

Only the object crossing the virtual line from the A side to the B side can be detected.

B->A

Only the object crossing the virtual line from the B side to the A side can be detected.

- 3) Click  and draw a virtual line on the preview window.

Note

- If you want to draw another virtual line, you must select another virtual line ID for it.
- Up to 4 lines can be drawn.

-
- 4) **Optional:** Click  and drag the virtual line to adjust its position

- 5) **Optional:** Click  to delete the selected virtual line.

7. Set the sensitivity between 1 and 100.

8. Check the linkage action(s) for the alarm.

Alarm Output

Enable the alarm output function. Select the alarm output port and the external device connected to the port can be controlled.

Channel Record

Start the recording of the selected cameras when alarm is triggered.

Audible Warning

The client software gives an audible warning when alarm is triggered. You can select the alarm sound for audible warning. For setting the alarm sound, refer to **Set Alarm Sound**.

Email Linkage

Send an email notification of the alarm information to one or more receivers.

Alarm on E-map

Display the alarm information on the E-map.

Alarm Triggered Pop-up Image

The image of the triggered camera pops up when alarm is triggered.



Note

Set the triggered camera first, see step 5 in this task for details.

Alarm Triggered Video Wall Display

Display the video of the triggered camera on the video wall when alarm is triggered.



Note

Set the triggered camera first, see step 5 in this task for details.

9. **Optional:** Click **Copy to...** to copy the alarm parameters to other cameras.

10. Click **Save**.

9.1.7 Configure Alarm Input Alarm

When a device's alarm input receives a signal from an external alarm device, such as smoke detector, doorbell, etc., the client software can trigger linkage actions for notification.

Before You Start

Add the alarm inputs to the client and group the alarm inputs for management.

Perform this task when you need to configure the alarm input alarm.

Steps

1. Enter the Event Management page and click **Alarm Input** tab.
2. Select the alarm input channel to be configured.
3. Check **Enable** to enable the alarm input alarm.
4. Create a name for the alarm.
5. Set the alarm status according to the alarm input device.
6. Select the arming schedule template from the **Arming Schedule** field.

All-day Template

For all-day continuous arming.

Weekday Template

For working-hours continuous arming from 8:00 AM to 8:00 PM.

Template 01 to 09

Fixed templates for special schedules. You can edit the templates if needed.

Custom

Customize template as desired, see **Configure Arming Schedule** for details.

7. Select the triggered camera.

Note

To capture the picture of the triggered camera when the selected event occurs, you can also set the capture schedule and the storage in Storage Schedule. For details, refer to **Remote Storage Configuration**.

The image or video from the triggered camera pops up or displays on the video wall when alarm input alarm occurs.

8. Check the linkage action(s) for the alarm.

Alarm Output

Enable the alarm output function. Select the alarm output port and the external device connected to the port can be controlled.

Channel Record

Start the recording of the selected cameras when alarm is triggered.

Audible Warning

The client software gives an audible warning when alarm is triggered. You can select the alarm sound for audible warning. For setting the alarm sound, refer to **Set Alarm Sound**.

Email Linkage

Send an email notification of the alarm information to one or more receivers.

Alarm on E-map

Display the alarm information on the E-map.

Alarm Triggered Pop-up Image

The image of the triggered camera pops up when alarm is triggered.

Note

Set the triggered camera first, see step 7 in this task for details.

Alarm Triggered Video Wall Display

Display the video of the triggered camera on the video wall when alarm is triggered.

Note

Set the triggered camera first, see step 7 in this task for details.

9. **Optional:** Click **Copy to...** to copy the alarm parameters to other alarm inputs.

10. Click **Save**.

9.1.8 Configure Device Exception Alarm

When the enabled type of device exception occurs, such as HDD full, HDD exception, illegal login, device offline, and so on, the linkage actions will be triggered for notification. You can set the linkage actions as desired.

Perform this task when you need to configure the device exception alarm.

Steps

1. Enter the Event Management page and click **Exception** tab.
2. Select the device to be configured.
3. Select the device exception type, including HDD full, HDD exception, illegal login, device offline, etc.
4. Check **Enable** to enable the device exception alarm.
5. Check the linkage action(s) for the alarm.

Alarm Output

Enable the alarm output function. Select the alarm output port and the external device connected to the port can be controlled.



Note

Alarm Output is not available for device offline exception.

Audible Warning

The client software gives an audible warning when alarm is triggered. You can select the alarm sound for audible warning. For setting the alarm sound, refer to **Set Alarm Sound**.

Email Linkage

Send an email notification of the alarm information to one or more receivers.

6. **Optional:** Click **Copy to...** to copy the alarm parameters to other devices.
7. Click **Save**.

9.1.9 Configure Arming Schedule

The client provides two default arming schedule templates: All-day template and weekday template. It also provides 9 pre-defined templates. You can set the time periods in each day of the week and save the settings as pre-defined arming schedule.

Perform this task when you need to configure the pre-defined arming schedule.

Steps

1. Open the Event Management page and click **Camera Event** tab.
2. Select the camera to be configured and select a event type.
3. Check **Enable** to enable detecting the selected event type.
4. Click **Edit** to enter the Templates Management page.
5. Drag the cursor on the timeline to set the time periods.



Note

Up to 8 time periods can be set for each day.

6. **Optional:** Perform the following operation(s) to manage the time periods.

Move	Move the cursor on a time period and when the cursor turns to  , drag to move the time period.
Lengthen or Shorten	Move the cursor to one end of a time period, and when the cursor turns to  , drag to lengthen or shorten the time period.
Delete	Select a time period, and then click  to delete it
Delete All	Click  to delete all time periods.
Copy to Other Dates	Select a time period, and then click  to copy the time periods settings to other dates.

7. Click **OK**.

9.1.10 Configure Custom Arming Schedule

You can set custom arming schedule as desired.

Perform this task when you need to configure custom arming schedule.

Steps

1. Open the Event Management page and click **Camera Event** tab.
2. Select the camera to be configured and select an event type.
3. Check **Enable** to enable detecting the selected event type.
4. Select **Custom** from the **Arming Schedule** field to open the Custom Schedule page.
5. Drag the cursor on the timeline to set the time periods.



Note

Up to 8 time periods can be set for each day.

6. **Optional:** Perform the following operation(s) to manage the time periods.

Move	Move the cursor on a time period and when the cursor turns to  , drag to move the time period.
Lengthen or Shorten	Move the cursor to one end of a time period, and when the cursor turns to  , drag to lengthen or shorten the time period.
Delete	Select a time period, and then click  to delete it
Delete All	Click  to delete all time periods.
Copy to Other Dates	Select a time period, and then click  to copy the time periods settings to other dates.

7. Click **Save as Schedule Template**.

The custom template is saved as template 01, 02, 03... or 09.

8. Click **OK**.

9.2 View Alarm and Event Information

The received recent alarms of all the added and armed devices, and the exceptions of the client can be displayed in the alarm event center. And you can view their information and manage them.

9.2.1 Enable Receiving Alarms from Devices

Before the client can receive the alarm information from the device, you need to arm the device first.

Steps

1. Click  → **Tool** → **Device Arming Control** open Device Arming Control page.

All the added devices display on this page.

2. In the Auto-Arming column, turn on the switch to enable auto-arming.

After turned on, the device will be armed by the client software automatically and once armed, its arming status will turn to **Armed**. The alarms of armed device(s) are automatically uploaded to the client when the alarm is triggered.

9.2.2 View Alarm Information

Different alarm types, including motion detection, video loss, video tampering, alarm input, and other alarms, will be displayed in the alarm and event center if the client receives the triggered alarm and event.

Before You Start

Configure the alarms in Event Management. See the configuration of different alarms (e.g., **Configure Motion Detection Alarm**) for details.

Steps

1. Click **Alarm Event** on the Control Panel to enter the alarm center.

The received alarm information, including alarm time, source, details, and content displays on the page.

2. **Optional:** Perform the following operation(s) after displaying the alarm information.

View Live Video of Triggered Camera

For alarm configured with triggered camera, click  in the Operating Alarm column to view the live video and alarm picture of the triggered camera. See **View Pop-up Alarm Information** for details.

Send Email Notification

Click  in Operating Alarm column to send an email notification of the alarm to one or more receivers.



Note

Configure the email settings first. See **Set Email Parameters** for details.

Write Alarm Note	Click the Note column and enter the description for the alarm.
Clear Alarm	Click Clear , or right-click on an alarm and select Clear .
Enable/Disable Audible Warning	When the client receives an alarm, the PC running the client will play alarm sound. For alarm configured with audible warning, click Sound to enable or disable the audible warning for the alarm.



Note

For configuring audible warning for the alarms, refer to the configuration of different alarms (e.g., **Configure Motion Detection Alarm**).

Enable/Disable Alarm Pop-up Window

For the alarm configured with alarm triggered pop-up window, a window will pop up, showing the alarm details, when the Control Client receives the alarm. You can disable or enable the pop-up window by clicking **Alarm Pop-up Window**.



Note

For configuring alarm pop-up window for the alarms, refer to the configuration of different alarms (e.g., **Configure Motion Detection Alarm**).

9.2.3 View Event Information

The exceptions of the client software, such as the live view failure, device disconnection, can display in the alarm and event center.

Perform this task to view the event information of the client.

Steps

1. Enter the Alarm Event page.

- Click  in the lower-right corner of the client software to show the Alarms and Events panel, and then click .
- Click **Alarm Event** on the Control Panel.

2. Click **Event** tab.

The received event information, including occurred time and details display on the page.

3. **Optional:** Clear the event information.

- Click .
- Right-click on an event information and then click **Clear**.

9.2.4 View Pop-up Alarm Information

For the alarm configured with pop-up image, the alarm videos and pictures can display on a pop-up window when the corresponding alarm is triggered.

Before You Start

Configure the alarm linkage action as Alarm Triggered Pop-up Image, see the configuration of different alarms (e.g., **Configure Motion Detection Alarm**) for details.

Steps

1. Click **Alarm Event** on the control panel to enter the event and alarm center.
2. Click **Alarm Pop-up Window** to enable alarm triggered pop-up function.
3. Trigger the alarm.

A window, showing the alarm video, alarm picture, and alarm details, will pop up.

4. Perform the following operation(s) after popping up the image.

View Alarm Video

You can view the live video of the camera configured in Camera Linkage.

Move the cursor over the video and click  to view instant playback to see what happens when the alarm is triggered.

Click  to capture a picture of the live video and save the snapshot on the PC running the client.

Click  to record the live video and save the recorded video footage on the PC running the client.

Right-click on the alarm video to perform other operations. For details, refer to **Live View**

View Alarm Picture

The alarm picture captured by the camera configured in Camera Linkage will display on the field below the alarm video.

View Previous or Next Alarm

Click **Prev Page** or **Next Page** to view the previous or next alarm information.

Chapter 10 Map Management

The E-map function gives a visual overview of the locations and distributions of the installed cameras, alarm input devices, alarm output devices. You can get the live view of the cameras on the map, and you will get a notification message from the map when alarm is triggered.

10.1 Add Map

You should add a map as the parent map for the hot spots and hot regions.

Perform this task when you need to add a map.

Steps

 Note

Only one map can be added to one group.

1. Open the E-map page.
 2. Select a group for which you want to add a map.
-

 Note

For details about setting the group, refer to **Group Management** .

3. Click  in the map display area to open the map adding window.
 4. Input a descriptive name of the added map as desired.
 5. Click  and select a map picture from the local path.
-

 Note

The picture format of the map can only be PNG, JPG or BMP.

6. Click **OK**.
7. **Optional:** Perform the following tasks after adding the map.

Zoom in/out	Use the mouse wheel or click  or  to zoom in or zoom out on the map.
Adjust Map Area	Drag the yellow window in the lower-right corner or use the direction buttons and zoom bar to adjust the map area for view.

10.2 Manage Hot Spot

The cameras, alarm inputs, and alarm outputs can be added on the map and are called the hot spots. The hot spots show the locations of the cameras, alarm inputs, and alarm outputs, and you can also get the live view and alarm information of the surveillance scenarios through the hot spots.

Note

For details about managing and previewing the zone hot spot, refer to .

10.2.1 Add Camera as Hot Spot

You can add cameras to the map as hot spots.

Perform this task when you want to add cameras as hot spot on the map.

Steps

1. Enter the E-map page.
2. Click **Edit** on the E-map toolbar to enter the map editing mode.
3. Click  on the toolbar to open the Add Hot Spot window.
4. Check the checkboxes to select the cameras to be added.
5. **Optional:** Edit hot spot name, select the name color and select the hot spot icon by double-clicking the corresponding field.
6. Click **OK** to save the settings.

Note

You can also drag the camera icons from the group list to the map directly to add the hot spots.

The camera icons are added on the map as hot spots and the icons of the added cameras in the group list change from  to .

10.2.2 Add Alarm Input as Hot Spot

You can add the alarm inputs to the map as hot spots.

Perform the following steps to add alarm input as hot spot on the map.

Steps

1. Enter the E-map module.
2. Click **Edit** on the E-map toolbar to enter the map editing mode.
3. Click  on the toolbar to open the Add Hot Spot window.
4. Check the checkboxes to select the alarm inputs to be added.
5. **Optional:** Edit hot spot name, select the name color and select the hot spot icon by double-clicking the corresponding field.
6. Click **OK**.

Note

You can also drag the alarm input icons from the alarm input list to the map directly to add the hot spot.

The alarm input icons are added on the map as hot spots and the icons of the added alarm inputs in the group list change from  to .

10.2.3 Add Alarm Output as Hot Spot

You can add the alarm outputs to the map as hot spots.

Perform the following steps to add alarm output as hot spot on the map.

Steps

1. Enter the E-map module.
2. Click **Edit** on the E-map toolbar to enter the map editing mode.
3. Click  on the toolbar to open the Add Hot Spot window.
4. Check the checkboxes to select the alarm outputs to be added.
5. **Optional:** Edit the hot spot name, select the name color, and select the hot spot icon by double-clicking the corresponding field.
6. Click **OK**.



Note

You can also drag the alarm output icons from the alarm output list to the map directly to add the hot spot.

The alarm output are added on the map as hot spots and the icons of the added alarm outputs in the group list change from  to .

10.2.4 Edit Hot Spot

You can edit the information of the added hot spots on the map, including the name, the color, the icon, etc.

Perform the following steps to edit hot spot parameters.

Steps

1. Enter the E-map module.
2. Click **Edit** at the lower left corner to enter the map editing mode.
3. Open the Modify Hot Spot window.
 - Select the hot spot icon on the map and then click  on the E-map toolbar to open the Modify Hot Spot window.
 - Right-click the hot spot icon on the map and select **Modify** in the right-click menu to open the Modify Hot Spot window.
 - Double-click the hot spot icon on the map to open the Modify Hot Spot window.
4. Edit the hot spot name in the text field, select the hot spot color, the icon, and the linked zone.
5. Click **OK**.
6. **Optional:** Delete the hot spot.
 - Select the hot spot icon and click  on the toolbar to delete the hot spot.

- Right-click the hot spot icon and select **Delete** to delete the hot spot.

10.2.5 Preview Hot Spot

You can view the live view of the camera hot spot and the triggered alarm information of the hot spot on the map.

Perform the following steps to view the live view of the camera hot spot and the triggered alarm information of the hot spot on the map.

Steps

1. Enter the E-map module.
2. Click **Exit Editing Mode** on the E-map toolbar to enter the map preview mode.
3. Get the live view of the camera.
 - Double-click the camera hot spot on the map.
 - Right-click the camera hot spot on the map and click **Live View**.
4. **Optional:** For camera hot spot, if there is any alarm triggered,  will appear and twinkle near the hot spot (it will twinkle for 10s). You can do the following operations:

View Alarm Information

Click  to view the alarm information, including the alarm type and the triggering time.

View Instant Playback

Right-click the camera hot spot on the map and click **Live View** to view the 30s instant playback.



Note

- For DeepinMind device, the alarm picture will display near the hot spot if there is any alarm triggered. You can click  and double click the alarm to view the alarm details and play back the alarm recorded video.
 - To display the alarm information on the map, you should select the **Alarm on E-map** as the alarm linkage action. For details, refer to **Alarm Configuration**.
-

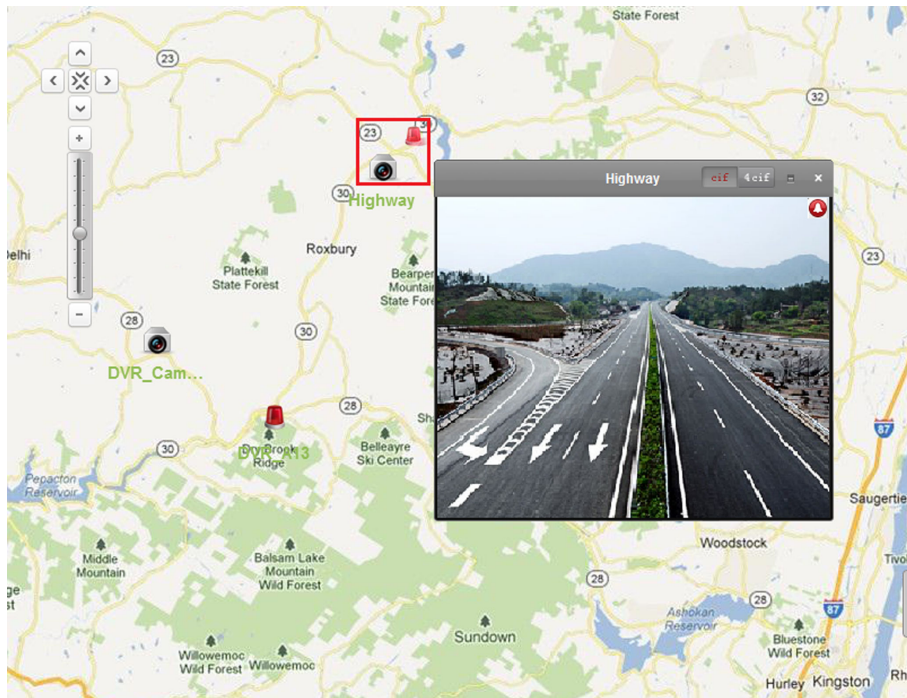


Figure 10-1 Preview Camera Hot Spot

5. **Optional:** For alarm output hot spot, if it is triggered,  will appear and twinkle near the hot spot (it will twinkle for 10s). Right-click the alarm output hot spot on the map and click **Close** or **Open** to control the alarm output status.

10.3 Manage Hot Region

The hot region function links a map to another map.

You can manage the hot region, such as adding, editing, or deleting hot region. You can also preview the hot region.

10.3.1 Add Hot Region

You can add a map to another map as a hot region and an icon of the link to the added map is shown on the main map. The added map is called child map while the map to which you add the hot region is the parent map.

Before You Start

At least two maps should be added. Refer to **Add Map** for details about adding maps.

Perform this task when you need to add hot region.

Steps



Note

A map can only be added as the hot region for once.

1. Enter the E-map page.
2. Click **Edit** on the E-map toolbar to enter the map editing mode.
3. Select an added map as the parent map.
4. Click  on the toolbar to open the Add Hot Region window.
5. Check the checkbox to select the child map.
6. **Optional:** Edit the hot region name, and select the hot region color and icon by double-clicking the corresponding field.
7. Click **OK**.

The child map icons are added on the parent map as the hot regions.

10.3.2 Edit Hot Region

You can edit the information of the hot regions on the parent map, including name, color, icon, etc.

Perform this task when you need to edit hot region.

Steps

1. Enter the E-map module.
2. Click **Edit** on the E-map toolbar to enter the map editing mode.
3. Open the Modify Hot Region window.
 - Select the hot region icon on the parent map and click  on the toolbar.
 - Right-click the hot region icon and select **Modify**.
 - Double-click the hot region icon.
4. Edit the hot region name and select color, icon, and the linked child map as desired.
5. Click **OK**.
6. **Optional:** Delete the hot region.
 - Select the hot region icon and click  on the toolbar.
 - Right-click the hot region icon and click **Delete**.

10.3.3 Preview Hot Region

You can view the hot spots on the hot region.

Perform this task when you need to preview hot region.

Steps

1. Enter the E-map page.



Note

If you are in the editing map mode, click **Exit Editing Mode** on the E-map toolbar to enter the map preview mode.

You can view the hot spots on the hot region.

2. Click the hot region icon to enter the linked child map.
3. **Optional:** Click  on the toolbar to go back to the parent map.
4. **Optional:** Click  on the toolbar to clear the alarm information.

Chapter 11 Cloud P2P

The client software also supports to register a Cloud P2P account, log into your Cloud P2P account and manage the devices which support the Cloud P2P service.

11.1 Register a Cloud P2P Account

The client software supports registering a Cloud P2P account to manage devices which supports Cloud P2P service.

Perform this task when you want to register a Cloud P2P account via the client software.

Steps

1. Enter the Device Management page.
2. Click **Device** → **Cloud P2P Device** to enter the Welcome to Cloud P2P page.
3. Select the region where the Cloud P2P account registered.
4. Click **Login** to open the Login page.
5. Click **Register** to open Register Account window.

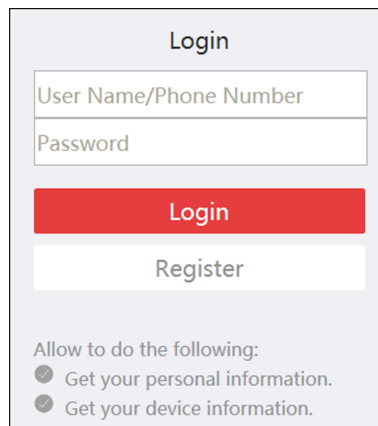
A screenshot of a web interface titled "Login". It features two input fields: "User Name/Phone Number" and "Password". Below these fields are two buttons: a red "Login" button and a white "Register" button. At the bottom, there is a section titled "Allow to do the following:" with two radio button options: "Get your personal information." and "Get your device information.".

Figure 11-1 Register Cloud P2P Account

Note

The web browser should be Safari 11.0 and later.

6. Input required information, including user name, password, confirm password, and phone number/email address.
-

Caution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least

three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

7. Click **Send Message** to get verification code.

The system will send verification code to your phone or email.

8. Input the received verification code in the **Verification Code** text field.

9. Click **Register** to finish the registration.

11.2 Log in to Cloud P2P Account

You can log in to Cloud P2P account via the client software.

Before You Start

Register a Cloud P2P account.



Note

For details, refer to ***Register a Cloud P2P Account*** .

Perform this task when you want to log in to the registered Cloud P2P account via client software.

Steps

1. Enter the Device Management page.
2. Click **Device → Cloud P2P Device** to enter the Welcome to Cloud P2P page.
3. Click **Login** to enter Login page.
4. Input user name/phone number, and password.
5. Click **Login** to log into your account.
6. **Optional:** Click **Logout** to log out of your account.

11.3 Device Management

You can add the Cloud P2P device to the Cloud P2P account, and delete the added device(s) from the account. You can also do remote configuration and group management to the devices of the Cloud P2P account.

11.3.1 Add Device to Cloud P2P Account

You can add the Cloud P2P device to the Cloud P2P account via two ways, i.e., adding manually or adding via online device.

Note

You can add 256 devices (1024 cameras) to one Cloud P2P account at most.

Add Online Device

You can add online Cloud P2P device(s) in the same local subnet with the PC running the client to the Cloud P2P account.

Perform this task if you need to add online device(s) to the Cloud P2P account.

Steps

1. Enter the Device Management page.
2. Click **Device** → **Cloud P2P Device** and log into your Cloud P2P account.

The active online devices in the same local subnet with the client software will be displayed on the Online Device area. You can click **Refresh Every 60s** to refresh the information of the online devices.

3. Select the device(s) which support Cloud P2P service on the online device list.

Online Device (3) Refresh Every 60s

Add to Account

Add All

Modify Netinfo

Reset Password

Activate

Filter

	Security	Server Port	Device Serial No.	Start Time	Added	Support Hik...	Hik-Connec...
99	Active	8000	iDS-9632NX-1B/...	2017-06-23 10:00:55	No	N/A	N/A
3	Active	8000	DS-2DE2204IW-...	2017-06-21 16:35:45	No	Yes	Enabled

Figure 11-2 Online Device List

Note

For the inactive device, you need to create the password and enable the Cloud P2P service for it before you can add the device properly. For details, refer to **Activate Devices**.

4. Click **Add to Account** to open the device adding dialog box.
5. Input the verification code.
The verification code is created when you enabling the Cloud P2P service. For details, refer to **Activate Devices**.
6. Click **OK** to add the device.
7. **Optional:** Select device from the Device Management page and click **Delete** to remove the device from the Cloud P2P account.

What to do next

After adding the device to the Cloud P2P account, you should add the device by Cloud P2P if you want to add the device to the local client software. For details, refer to **Add Device by Cloud P2P**.

Manually Add Device

You can add Cloud P2P device to the Cloud P2P account manually by inputting the serial No. and verification code.

Perform this task if you need to add a device manually.

Steps



Note

- Only the device that supports the Cloud P2P service can be added.
 - One device can only be added to one Cloud P2P account.
-

1. Enter the Device Management page.
2. Click **Device** → **Cloud P2P Device** and then log into your Cloud P2P account.
3. Click **Add Device** to open the Add Device window.
4. Input the serial No. and verification code of the device.

Serial No.

Marked on the label of you device.

Verification Code

Created when you enabling the Cloud P2P service. For details, refer to **Activate Devices** .

5. Click **OK** to add the device.

The successfully added device will be displayed on the Device Management page.

What to do next

After adding the device to the Cloud P2P account, you should add the device by Cloud P2P if you want to add the device to the client. For details, refer to **Add Device by Cloud P2P** .

11.3.2 Edit Camera Parameters

After adding a Cloud P2P device to the local client software, you can edit the camera parameters and set stream key.

Before You Start

Add a Cloud P2P device to the local client software.



Note

See **Manually Add Device** or **Add Online Device** for details.

Perform this task when you need to edit camera which is added to Cloud P2P account.

Steps

1. Enter Device Management page.
2. Click **Group** tab.

3. Select camera in the resource list.
4. Click **Modify** to pop up Modify Camera dialog.
5. Edit the camera information, including name, protocol type, etc.

Stream Key

For Cloud P2P device, the stream key is the same with the verification code, which is created when you enable the Cloud P2P service.

If the live view or video file(s) of the Cloud P2P device is encrypted, you should input the stream key on the Modify Camera window before you can view the live view or video file(s) of the device.



Note

You can set whether to encrypt the live view or video file(s) of the Cloud P2P device on the Cloud P2P mobile client software. For details, refer to the *User Manual of the Cloud P2P Mobile Client Software*.

6. **Optional:** Click **Copy to** to copy the configured parameters to other camera(s).
7. Click **OK** to edit the camera.

Chapter 12 Log Management

In the Log Search module, you can search the log files and filter the results.

12.1 Search Logs

Two types of log files are provided: client logs and remote logs. The client logs refer to the log files of the client and are stored on the local PC; the remote logs refer to the log files of the connected devices and are stored on the local device.

12.1.1 Log Search

Two log types are provided: operation log and system log. The operation logs refer to the normal operations that the user did on the client, such as add device, reset password, and start live view; and the system logs record the system information, such as login, logout, log and unlock. You can search the log files and view the log details, including time, user, etc.

Perform the following steps to search the log files.

Steps

1. Enter the Log Search module.
2. Click  to specify the start time and end time.



Note

You can search the logs within one month.

3. Select a user to search the log files which are generated when this user log into the client.
4. Select **Operation Log** or **System Log** as log type.
5. Click **Search**.

The log files between the start time and end time will be displayed on the list. You can check the operation time, type and other information of the logs.

6. **Optional:** Perform the following operations if there are too many log files.

Filer Click  on each table header and select to filter the logs.

Sort Click the table header to sort the logs by the time or letter sequence.

12.1.2 Search Connected Device Logs

You can search the remote logs, namely, the log files of the connected device.

Perform the following steps to search the log files of the connected device.

Steps

1. Open the Log Search page.
2. Select **Remote Logs** as the to-be-searched log type.
3. Click  to specify the start time and end time.



Note

You can search the logs within one month.

4. Click **Search**.

The log files between the start time and end time will be displayed on the list. You can check the operation time, type and other information of the logs.



Note

Narrow the time range or filter the log type for search if there are too many log files.

12.2 Filter Logs

After being searched out successfully, the log files can be filtered by the keyword or condition, and thus you can find the logs as you want.

Before You Start

Search logs. See **Log Search** and **Search Connected Device Logs** for details.

Perform the following steps to filter logs.

Steps

1. Click **Log Search** on the control panel to enter the Log Search page.
2. Click **Log Filter** or  on the Log Search page to expand the Log Filter panel.
3. Select filtering mode.
 - Select **Filter by Keyword**, and then input keyword for filtering in the text field.
 - Or select **Filter by Condition**, and then specify log type in the drop-down list.
4. **Optional:** Click **More...** to filter the log files more accurately.
5. Click **Filter** to start filtering.

12.3 Export Pictures

The alarm pictures, which are stored in the storage server, can be exported to the local PC.

Before You Start

Add storage device to the client for storing the video files and pictures of the added encoding devices, see **Store Picture and Video on Storage Device**

Perform the following steps to export pictures.

Steps

1. Click **Log Search** on the control panel to open the Log Search page.
2. Search client logs.



Note

See **Log Search** for details.

3. Select **Alarm Log** as the log type when filtering the results.



Note

See **Filter Logs** for details.

4. Select the alarm pictures.
5. Click **Export Picture** to open the Export Picture window.
6. Click  and select a local saving path, and then set a name for the file.
7. Click **Export** to export the selected pictures.

Chapter 13 Account Management

Multiple user accounts can be added to the client software, and you are allowed to assign different permissions to different users if needed.

Perform this task to add an user account.

Steps



Note

The user account you registered to log in the software is set as the super user.

1. Enter the Account Management page.
2. Click **Add User** to open the Add User window.
3. Select the user type from the drop-down list.

Administrator

The administrator account has all permissions by default, and can modify the passwords and permissions of all operators and its own.

Operator

The operator account has no permission by default and you can assign the permissions manually. An operator can only change the password of its own account.

4. Input the user name, password, and confirm password as desired.
-



Caution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

5. Check the checkboxes to assign the permissions to the created user.
 6. **Optional:** Select a user in the Copy from drop-down list to copy the permissions of the selected user.
 7. **Optional:** Click **Default Permission** to restore the default permissions of this user.
 8. Click **Save**.
-



Note

Up to 50 user accounts can be added for the client software.

After created user account successfully, the user account is added to the user list on the Account Management page.

9. Optional: Perform the following operations after the user account is created.

Edit User Select a user from the list and click **Edit User** to edit the user information.



Only the password of the super user can be edited.

Delete User Select the user from the list and click **Delete User**.



You cannot delete the super user.

Copy to For super and administrator user, you can click **Copy to** to copy the permissions to other user(s).

Chapter 14 System Configuration

The general parameters, live view and playback parameters, image parameters, file saving paths, icon of live view and playback toolbar settings, alarm sounds, email can be configured.

14.1 Set General Parameters

You can configure the frequently-used parameters, including log expired time, network performance, and etc.

Perform the following task when you need to set the above mentioned parameters.

Steps

1. Open the System Configuration page.
2. Click **General** tab to enter the General Settings page.
3. Configure the general parameters.

Log Expiry Date

The time for keeping the log files. Once exceeded, the files will be deleted.

Network Performance

Set the network conditions to **Normal**, **Better** or **Best**.

Maximum Mode

Select **Maximize** or **Full Screen** as the maximum mode. **Maximize** mode can maximize the display and show the taskbar. **Full Screen** mode can display the client in full-screen mode.

Enable Auto-login

Log into the client software automatically.

Pop up Security Prompt When Using Default Password

If the default password of the added device has not been changed, the prompt will pop up for notification.

Enable Alarm Triggered Pop-up Image

Enable the image pop-up when alarms occur. You can also click  or  to enable/disable the image pop-up in Alarm Event interface.

Pop Up Alarm Image for Minimized Client When Alarm Triggered Pop-up Image Enabled

Enable the alarm image popping up when the client is minimized if the Alarm Triggered Pop-up Image function is enabled.



Note

For enabling the Alarm Triggered Pop-up Image, refer to **Alarm Configuration** .

Pop Up Error Message When Email Settings are Empty

Set whether the client prompts the error message if the email is not configured.



Note

For setting the email, refer to ***Set Email Parameters***

Automatic Time Synchronization

Automatically synchronize the time of the added devices with the time of the PC running the client at a specified time point.

4. Click **Save**.

14.2 Set Live View and Playback Parameters

You can set the parameters for live view and playback, including picture format, pre-play duration, etc.

Perform the following task when you need to set the parameters for live view and playback.

Steps

1. Open the System Configuration page.
2. Click **Live View and Playback** tab.
3. Configure the live view and playback parameters.

Merge Downloaded Video Files

Set the maximum size of merged video file for downloading the video file by date.

Search Video Files Stored in

Search the video files stored in the local device, in the storage server, or both in the storage server and local device for playback.

Pre-play for

Set the pre-play time for event playback. By default, it is 30s.

Prioritize Playback of Video Files on Storage Server

Play back the video files recorded on the storage server preferentially. Otherwise, play back the video files recorded on the local device.

Resume Latest Live View Status After Restart

Resume the latest live view status after you log into the client again.

Disconnect Background Videos in Single Live View

In multiple-window division mode, double-click a live video to display it in 1-window division mode, and the other live videos will be stopped for saving the resource.

Enable Wheel for Zoom

Use the mouse wheel for zoom in or out of the video in PTZ mode, or for zoom in or restoring of the video in digital zoom mode. In this way, you can directly zoom in or out (or restore) the live video by scrolling the mouse.

Skip Unconcerned Video during VCA Playback

Skip the unconcerned video during VCA playback and the unconcerned video will not be played during VCA playback.

4. Click **Save**.

14.3 Set Image Parameters

The image parameters of the client can be configured, such as view scale, play performance, etc. Perform the following task when you need to set image parameters.

Steps

1. Open the System Configuration page.
2. Click **Image** tab to enter the Image Settings interface.
3. Configure the image parameters.

View Scale

The view scale of the video in live view or playback. It can be set as **Full Screen**, **4:3**, **16:9**, or **Original Resolution**.



Note

You can also set the view scale in Live View module. For details, refer to **Live View**.

Play Performance

The play performance of the live video. It can be set as **Shortest Delay**, **Balanced**, or **Fluency**.

Auto-change Stream Type

Change the video stream (main stream or sub-stream) automatically in live view according to the size of the display window.



Note

When the window division is larger than 9, it will switch to sub-stream automatically.

Enable Highlight

Mark the detected objects with green rectangles in live view and playback.

Display Transaction Information

Display the transaction information on the live view image.

VCA Rule

Display the VCA rule in the live view.

Enable Frame Extracting for High-speed Playback

When play back the video in high-speed (8x speed and above), you can disable this function to make the image of playback more fluent to view the details.

4. Click **Save**.

14.4 Set File Saving Path

The video files from manual recording, the captured pictures and the system configuration files are stored on the local PC. The saving paths of these files can be set.

Perform the following task when you need to set the file saving path.

Steps

1. Open the System Configuration page.
2. Click **File** tab to enter the File Saving Path Settings page.
3. Click  and select a local path for the files.
4. Click **Save**.

14.5 Set Icons Shown on Toolbar

The icons and the order on the toolbar in the live view and playback window can be customized. You can set to display what icons and set the icon order.

Perform the following task when you need to set icons shown on Toolbar.

Steps

1. Open the System Configuration page.
2. Click **Toolbar** tab to enter the Toolbar Settings page.
3. Select the icon to display on the toolbar.
4. **Optional:** Drag the icon to set the icon order when displaying on the toolbar.

Table 14-1 Icons on Live View Toolbar

	Stop Live View	Stop the live view in the display window.
	Capture	Capture the picture in the live view process. The capture picture is stored in the PC.
	Record	Start manual recording. The video file is stored in the PC.
	PTZ Control	Start PTZ mode for speed dome. Click and drag in the view to perform the PTZ control.
	Digital Zoom	Enable the digital zoom function. Click again to disable the function.
	Instant Playback	Switch to the instant playback mode.
	Remote Configuration	Open the remote configuration page of the camera in live view.

Table 14-2 Icons on Playback Toolbar

	Capture	Capture the picture in the live view process. The capture picture is stored in the PC.
	Record	Start manual recording. The video file is stored in the PC.
	Digital Zoom	Enable the digital zoom function. Click again to disable the function.
	Download	Download the video files of the camera and the video files are stored in the PC. You can select to download by file or by date.

5. Click **Save**.

14.6 Set Alarm Sound

When the alarm, such as motion detection alarm, video exception alarm, etc., is triggered, the client can be set to give an audible warning and the sound of the audible warning can be configured.

Perform the following task when you need to set the alarm sound.

Steps

1. Open the System Configuration page.
2. Click **Alarm Sound** tab to enter the Alarm Sound Settings page.
3. **Optional:** Click  and select the audio files from the local path for different alarms.



Note

There are six pre-defined alarm sound type in the list.

4. **Optional:** Add customized alarm sound.
 - 1) Click **Add** to add customized alarm sound.
 - 2) Double click the **Type** field to customize the alarm sound name as desired.
 - 3) Click  and select the audio files from the local path for different alarms.
5. **Optional:** Click  for a testing of the audio file.
6. **Optional:** Select the added custom alarm sound and click **Delete** to delete it.
7. Click **Save**.



Note

The format of the audio file can only be WAV.

14.7 Set Email Parameters

An email notification can be sent when a system alarm occurs. To send the email to some specified receivers, the settings of the email need to be configured before proceeding.

Perform the following task when you need to set email parameters.

Steps

1. Open the System Configuration page.
2. Click **Email** tab to enter the Email Settings interface.
3. Input the required information.

Server Authentication (Optional)

If your email server requires authentication, check this checkbox to use authentication to log into the server and enter the login user name and password of your email account.

Encryption Type

You can check the radio to select **Non-Encrypted**, **SSL**, or **STARTTLS**.

Port

Input the communication port of email service. The port is 25 by default.

User Name

Input the user name of the sender email address if **Server Authentication** is checked.

Password

Input the password of the sender Email address if **Server Authentication** is checked.

Receiver 1 to 3

Input the email address of the receiver. Up to 3 receivers can be set.

4. **Optional:** Check **Enable SSL** to increase the security of email sending.
5. **Optional:** Click **Send Test Email** to send an email to the receiver for test.
6. Click **Save**.

Appendix A. Troubleshooting

Here are some common symptoms when operating the client software. We provide the possible causes and corresponding solutions to solve the problems.

A.1 Failed to get the live view of a certain device.

Problem

Failed to get the live view of a certain device.

Possible Reasons

- Unstable network or the network performance is not good enough.
- The device is offline.
- Too many accesses to the remote device cause the load of the device too high.
- The current user has no permission for live view.
- The version of the client software is below the needed version.

Solutions

- Check network status and disable other not in use process on your PC.
- Check the device network status.
- Restart the device or disable other remote access to the device.
- Log in with the admin user and try again.
- Download the client software of the latest version.

A.2 Local recording and remote recording are confused.

Problem

Local recording and remote recording are confused.

Solutions

- The local recording in this manual refers to the recording which stores the video files on the HDDs, SD/SDHC cards of the local device.
- The remote recording refers to the recording action commanded by the client on the remote device side.

A.3 Failed to download the video files or the downloading speed is too slow.

Problem

Failed to download the video files or the downloading speed is too slow.

Possible Reasons

- Unstable network or the network performance is not good enough.
- The NIC type is not compatible.
- Too many accesses to the remote device.
- The current user has no permission for playback.
- The version of the client software is below the required version.

Solutions

- Check network status and disable other not in use process on your PC.
- Directly connect the PC running the client to device to check the compatibility of the NIC card.
- Restart the device or disable other remote access to the device.
- Log in with the admin user and try again.
- Download the client software of the latest version.

Appendix B. FAQ (Frequently Asked Questions)

Here are some frequently asked questions when operating the client software. We provide the corresponding answers to help the users to solve the problems.

B.1 During live view, why an error message with error code 91 prompts ?

Question

During live view, why an error message with error code 91 prompts ?

Answer

For live view of multiple windows, the channel may not support sub stream. You should disable the function of **Auto-change Stream Type** in **System Configuration** → **Image** , and select the appropriate steam type for live view.

B.2 During live view, why the image is blurred or not fluent?

Question

During live view, why the image is blurred or not fluent?

Answer

Check the driver of video card. We highly recommend you update the driver of video card to the latest version.

B.3 Why the memory leaked and the client crashed after running for a while?

Question

Why the memory leak and the client crashed after running for a while?

Answer

In the installation directory of the client software, open the **Setup.xml** file with Notepad and modify the value of **EnableNetandJoystickCheck** to **false**. Restart the client, and if the problem is still not solved, contact our technique support.

B.4 During live view, when getting stream via the Stream Media Server, why an error message with error code 17 prompts?

Question

During live view, when getting stream via the Stream Media Server, why an error message with error code 17 prompts?

Answer

Check the port mapping of Stream Media Server, especially RTSP port.

Appendix C. Error Code

Code	Error Name	Description
Guarding Vision		
317	No videos.	It will be prompted when the user has no permission to play back.
HCNetSDK.dll		
1	Invalid user name or password.	
2	No permission.	The user in the device has no enough permission.
4	Invalid channel number.	It will be prompted in the live view of remote screen control.
5	No more devices can be connected.	
7	Failed to connect the device.	
23	Not supported.	
29	Operation failed.	
43	No buffer.	It will be prompted when adding a device and the device port is occupied by a web server.
55	Invalid IP address.	
56	Invalid MAC address.	
91	The channel does not support the operation.	It will be prompted when failed to get the sub stream.
96	The device is not registered on the DDNS.	
153	The user is locked.	
250	The device is not activated.	
404	Channel No. error or the device does not support the sub stream.	It will be prompted when failed to get the sub stream or the sub stream does not exist.
424	Failed to receive the data for RTSP SETUP.	It will be prompted when adding the live view for the software DVS via external network.
800	No more bandwidth can be used.	
Playctrl.dll		

Code	Error Name	Description
2		The stream is not a Video & Audio stream.
6		The playback window turns black when adopting H.265 in the 64-bit operating system.
SMS		
3		The connection problem between the software and the stream media server.
17		The streaming problem between the stream media server and the device.

